

## How to replace the fascia

Step 1:

Remove the regulator as shown in the image.



Step 2:

Take out all the knobs.




Step 3:

Remove all screws from the knob bezel.



Step 4:

Take out the side burner injector nut as the picture shows on.

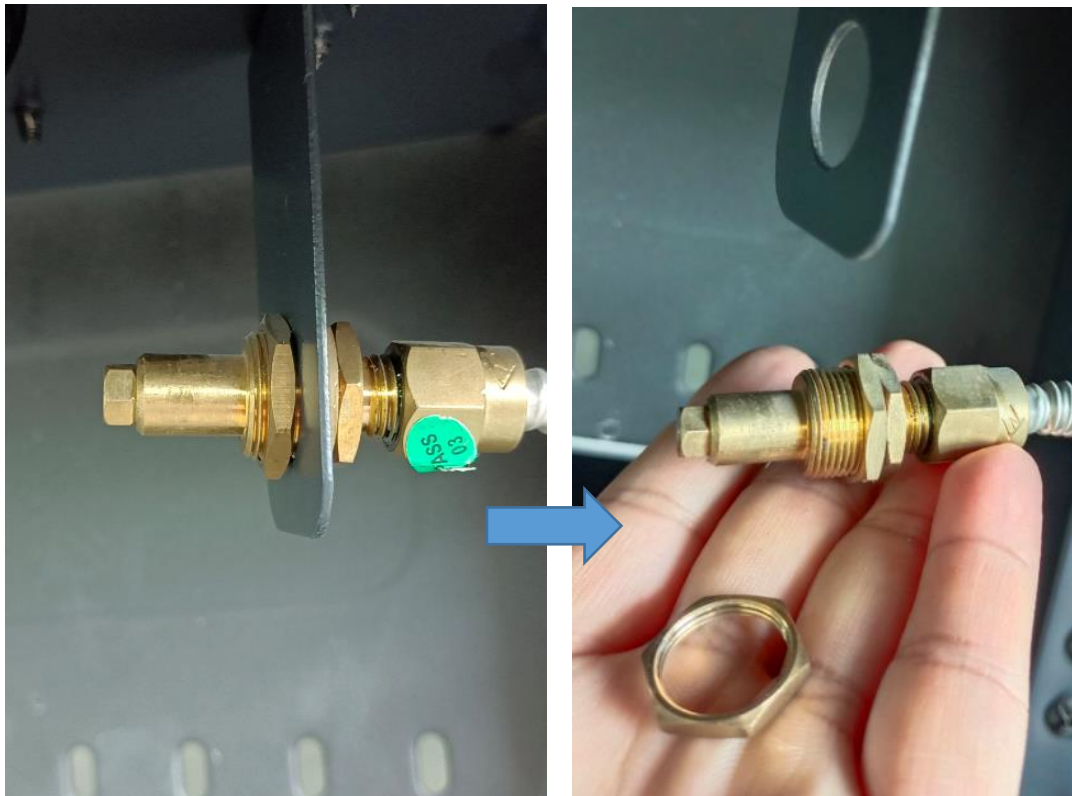


Step 5:

Take out the bolts as the picture shows.



Step 6:

Take out the bolts as the picture shows.

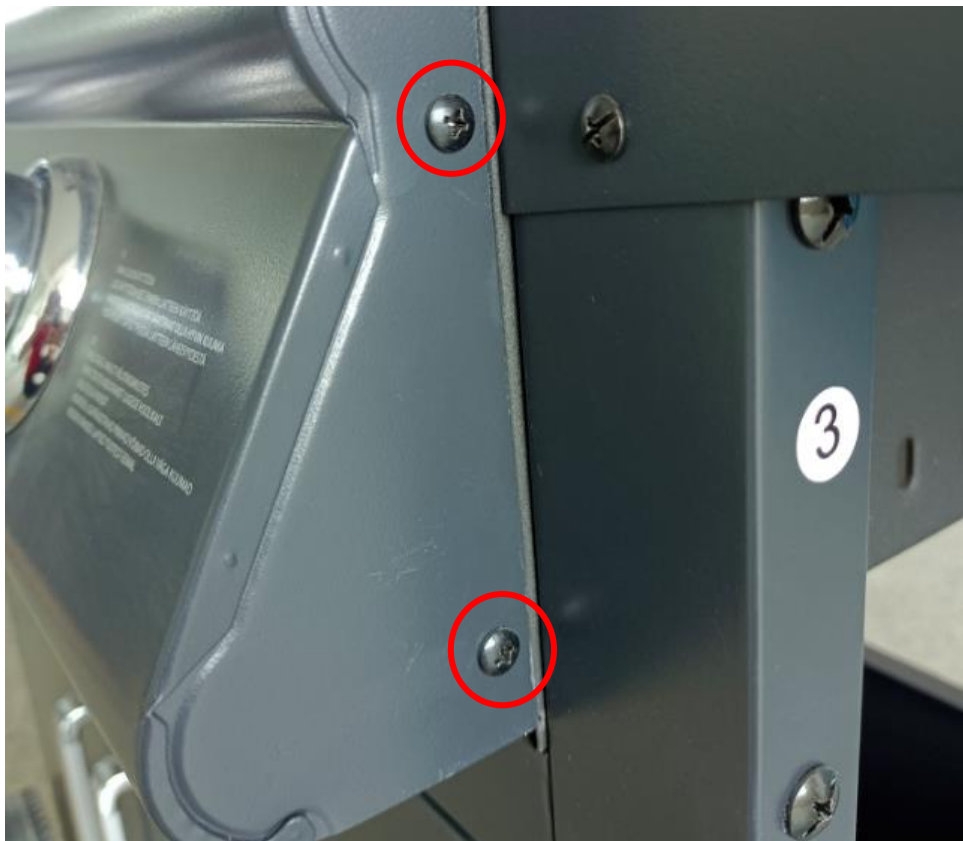



Step 7:

Gently draw the fascia out.



Step 8:

Replace with a new fascia.



Step 9:

- A. Reverse steps above to re-install the parts. Please pay attention when installing the fascia so that each injector on the manifold coincide with the burner inlets.
- B. Conduct a leak test for the regulator.

