

How to replace the manifold set

Step 1:

Remove the regulator as shown in the image.



Step 2:

Take out all the knobs.




Step 3:

Remove all screws from the knob bezel.



Step 4:


Take out the side burner injector nut as the picture shows below.

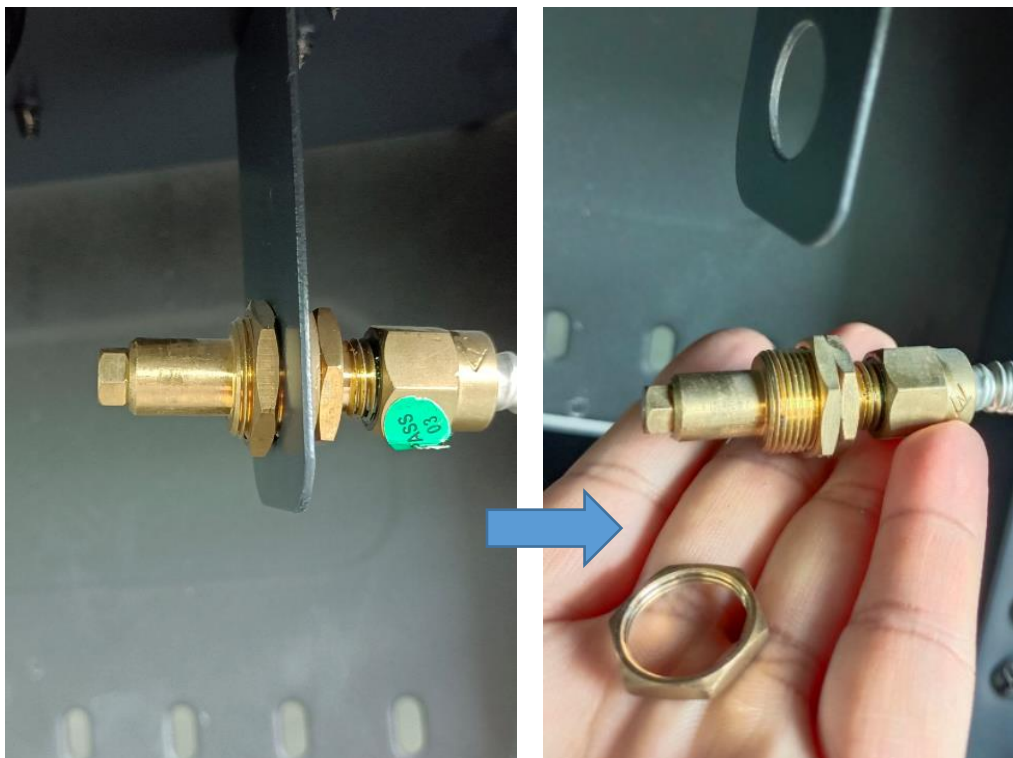

Step 5: Take out the bolts as the picture shows.



Step 6: Take out the bolts as the picture shows.

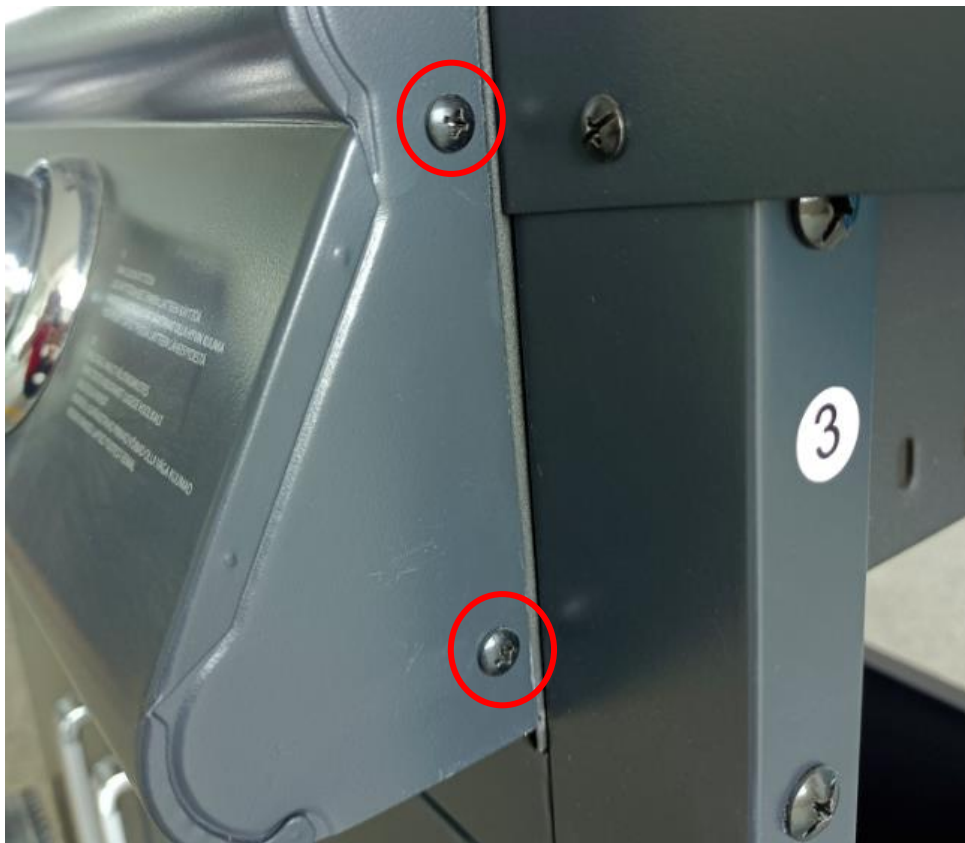

Step 7: Gently draw the fascia out.



Step 8: Replace with a new manifold.



Step 9:

- A. Reverse steps above to install the parts back. Please pay attention when installing the fascia since each injector on the manifold must aim at the burner inlets.
- B. Conduct a leak test for the regulator.

