

How to replace the side burner

Step 1: Take out the bolts as the picture shows.



Step 2: Gently draw the side burner out.



Step 3:

- A. Replace with a new side burner.
- B. Reverse steps above to install the parts back.