


Steps to replace the side burner

Step 1: Loosen the two mounting screws at the bottom of the furnace

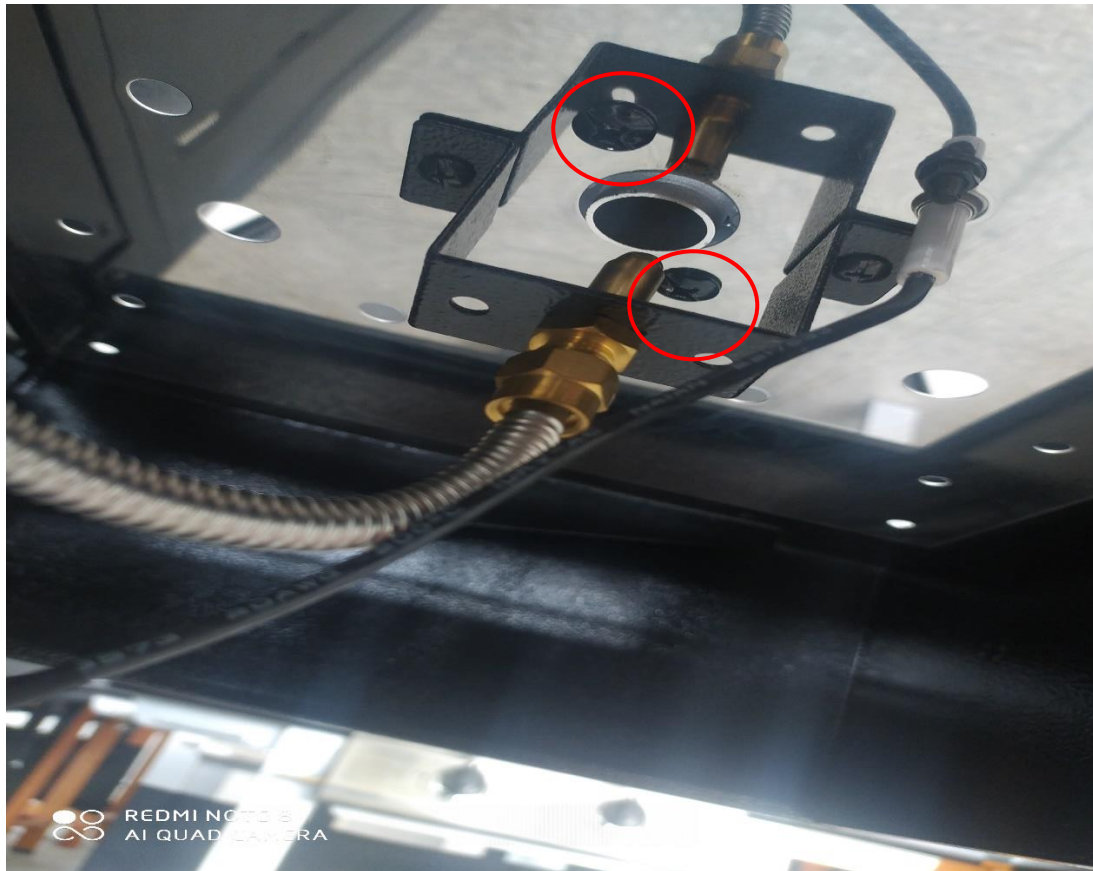

Step 2: Remove the furnace jacket.

