


How to replace the side burner

Step 1: Pull out the side burner ignition wire.

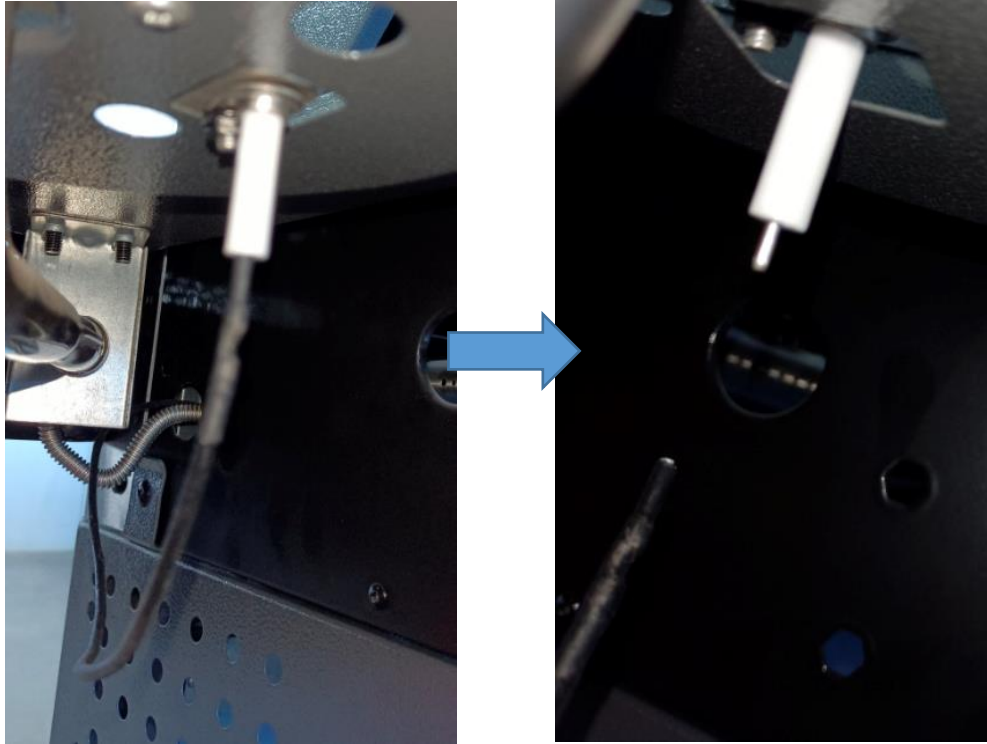


Step 2: Take out the bolts as the picture shows below.





Step 3: Gently draw the side burner out as shown in the following image.

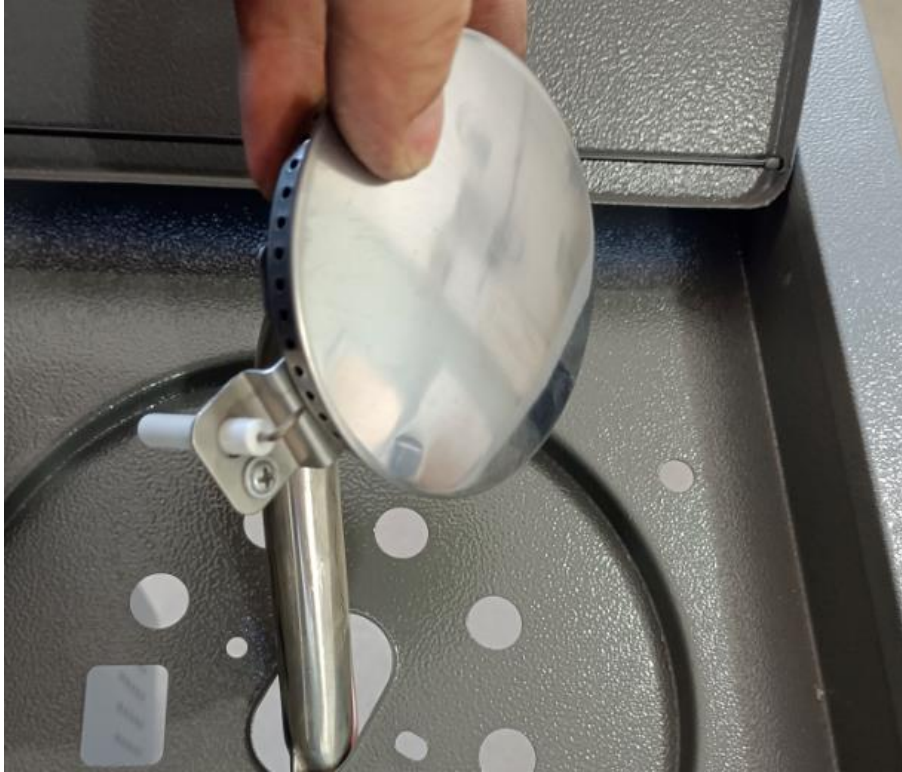

Step 4: Take out the bolts as the picture shows below.





Step 5: Replace with a new side burner.



Step 6: Reverse steps above to install the parts back.