



## How to replace the rear burner (tube burner)

Step 1: Take out the nuts as the picture shows.



Step 2: Draw the rear burner reflector out.



Step 3: Take out the bolts as the picture shows.



Step 4: Gently draw the rear burner ignition wire out.





---

Step 5: Gently draw the rear burner out.



Step 6:

- A. Replace with a new rear burner.
- B. Reverse steps above to install the parts back.