

jumbuck®



Hooded Charcoal BBQ With Battery Powered Spit Roaster

- Cooking surface - 355 x 355 mm chrome plated grill x 2
- Powder coated steel fire box and hood with chrome plated grills and warming rack
- Fold down side shelf & front shelf
- Side handle and plastic wheels for easy movement
- Dimensions - L1120 x W 640 x H 970 mm



Before using the BBQ, remove any packaging material within and around the BBQ supplied for protection during transit.

Important: Please retain these instructions for future use
MODEL No. BUN-897-000

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

CONTENTS

FEATURES & BENEFITS	3
ASSEMBLY, SAFETY & OPERATING INSTRUCTIONS	4
ROTISSERIE KIT – SAFETY INSTRUCTIONS & OPERATING INSTRUCTIONS	6
PARTS DIAGRAM	7
ASSEMBLY INSTRUCTIONS	9
LIST OF SPARE PARTS	16
JUMBUCK WARRANTY	18

CONTACT INFORMATION

For spare parts order from your nearest
Bunnings Warehouse.

Australia for service and warranty queries, please go to the
Garth support website: www.garthsupport.com
or call 1800 427 841

New Zealand for service and warranty queries, please go to
your local Bunnings warehouse or call 09-9782200,
Fax 09-9782222, Email Marketing@bunnings.co.nz

The Jumbuck logo is located at the bottom of the page, centered within a dark grey rounded rectangle. The word "jumbuck" is written in a bold, white, lowercase sans-serif font. The letter 'j' has a small dot above it.

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

FEATURES & BENEFITS



DIMENSIONS

Length	Width	Height
1120 mm	640 mm	970 mm

jumbuck

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

ASSEMBLY, SAFETY & OPERATING INSTRUCTIONS

Before You Start

For your safety, please read these instructions carefully before using this appliance and retain them for future reference.

- Dispose of all plastic packaging safely and keep it out of reach of children.
- Check all components against the parts list. If any parts are missing or damaged, contact your retailer immediately.

WARNING: Contains small parts. Keep out of reach of children.

Familiarize yourself with all components before assembly. Ensure that all holes and connection points are free from paint residue or obstructions. Before starting assembly, ensure you have sufficient space and a clean, dry working area.

IMPORTANT:

Although this product has been manufactured with the utmost care, some components may have sharp edges. Handle all parts with care during assembly.

Safety Warnings

General Safety

WARNING: FOR OUTDOOR USE ONLY

- Do not use this barbecue indoors or in enclosed or partially enclosed spaces such as houses, tents, caravans, motorhomes, or boats.

Danger: Risk of carbon monoxide poisoning, which may be fatal.

- Operate the barbecue only on a stable, level, and non-combustible surface.
- Position the barbecue at least **1 meter** away from buildings, fences, overhanging structures, or other combustible materials.
- Do not sit, stand, or climb on any part of the barbecue.

Fire and Fuel Safety

WARNING:

- Do not use spirit, petrol, or similar volatile fuels for lighting or re-lighting.
- Use only approved firelighters intended for charcoal barbecues.
- This barbecue will become extremely hot during use. Do not move it while in operation.

- Never leave the barbecue unattended when lit.
- Keep children and pets at a safe distance at all times.

Operation Safety

- Do not begin cooking until the fuel is covered with a layer of ash.
- Before first use, preheat the barbecue and maintain the fuel at a red-hot state for at least **30 minutes**.
- Metal surfaces may become extremely hot during operation. Avoid direct contact.
- Always use heat-resistant gloves when handling hot components.
- Ensure the barbecue has cooled completely before removing ash or performing maintenance.
- Flare-ups may occur when fat drips onto hot charcoal.
- Use a fine water spray to control small flames
- Alternatively, use baking soda or salt to extinguish flames
- Exercise caution when opening the hood e, as hot steam, smoke, or grease splashes may be released.

WARNING:

Hot embers may fall from the barbecue. Avoid contact and extinguish immediately to prevent injury or fire.

After Use and Storage

- Extinguish charcoal using sand or allow it to burn out completely.
- Do not leave the barbecue exposed to weather conditions. Use a suitable protective cover when not in use.
- The side handle is intended for moving the barbecue **only when it is completely cool**.
- Do not touch or use the handle during or immediately after operation.
- Do not store flammable or combustible materials near the barbecue.
- Do not use aerosol products in the vicinity of the barbecue.

IMPORTANT:

Do not modify this appliance. Unauthorized modifications may result in serious safety hazards and will void the warranty.

Failure to follow these instructions may result in serious injury, property damage, or both.

Food Safety Information

To ensure safe food preparation, follow these guidelines:

- Always wash hands thoroughly before and after handling raw meat.

The logo for Jumbuck, featuring the brand name in a bold, white, sans-serif font inside a dark grey rounded rectangular box.

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

- Keep raw meat separate from cooked foods and other ingredients.
- Ensure all cooking surfaces, utensils, and equipment are clean before use.
- Do not use the same utensils for raw and cooked foods.
- Ensure all food, especially meat, is thoroughly cooked before consumption.

CAUTION:

Consumption of raw or undercooked meat may result in foodborne illness (e.g. bacteria such as E. coli).

- To verify doneness, cut into the thickest part of the meat to ensure it is fully cooked.
- Properly cooked meat should produce **clear juices**, with no visible pink or red coloration.
- Pre-cooking large cuts of meat is recommended before finishing on the barbecue.

After use, clean all cooking surfaces and utensils thoroughly.

Lighting Procedures

Place the barbecue on a stable, level surface in a well-ventilated outdoor area, away from combustible materials. The base of the barbecue may become hot, so ensure it is positioned on a heat-resistant surface.

Line the charcoal pan and ash collector with aluminum foil. This helps protect the components, improves heat reflection, and makes cleaning easier after use.

This barbecue is designed for **charcoal use only**. Charcoal briquettes are recommended.

- Use only enough fuel to cover the base of the charcoal compartment in a single layer.
- **Maximum fuel load: 1.58 kg**
- Keep charcoal at least **5 cm away** from the sides of the barbecue body

Once the charcoal is fully ignited, spread it evenly across the charcoal compartment.

Warnings

- Charcoal becomes extremely hot during use. Take appropriate precautions.
- Never touch metal parts while the barbecue is in operation.
- Do not begin cooking until the charcoal is covered with a layer of ash.
- Do not cook while flames are present.

Using Solid Firelighters

1. Place 3–4 firelighter cubes in the center of the charcoal compartment.
2. Arrange charcoal around the firelighters in a pyramid shape.
3. Light the firelighters using a match or lighter.
4. When the charcoal is covered with a light grey ash, it is ready for cooking.

Using Liquid Firelighters

Apply a suitable amount of lighter fluid evenly over the charcoal. Allow the fluid to soak in before lighting.

Light the charcoal and allow it to burn until a grey ash layer forms on the surface.

Once fully ached over, spread the charcoal evenly and begin cooking.

WARNING:

- Do not use petrol, alcohol, or other volatile fuels.
- Use only firelighters suitable for charcoal barbecues.

Before Each Use

To prevent food from sticking, lightly coat the cooking grill with cooking oil using a long-handled brush.

Fill the charcoal pan, light the fuel, and allow it to burn until red-hot.

It is recommended to wait at least **30 minutes** before cooking.

Once the charcoal has turned ash grey, it is ready for use.

Flare-Up Control

Flare-ups may occur when fat or juices drip onto hot charcoal. While some smoke enhances flavor, excessive flare-ups may burn the food.

- Trim excess fat from meat to reduce flare-ups
- Move food away from direct flames if necessary
- Small flare-ups can be controlled using baking soda or salt

Always use protective gloves when handling items near the cooking area.

IMPORTANT:

If a grease fire occurs in the ash collector or charcoal pan, allow it to burn out naturally.

Do not remove the ash tray or pour water onto hot charcoal.

Replenishing Charcoal

If additional charcoal is required during cooking:

- Remove food from the grill
- Carefully lift the cooking grill using heat-resistant gloves
- Add charcoal as needed

Extinguishing the Barbecue

- Use sand to extinguish the charcoal after cooking
- Allow the barbecue to cool completely before removing ash

The logo for Jumbuck, featuring the brand name in a bold, white, sans-serif font inside a dark grey rounded rectangular box.

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

ROTISSERIE KIT – SAFETY INSTRUCTIONS & OPERATING INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before use and retain this manual for future reference.

WARNING

- This rotisserie kit is intended for outdoor use only.
- Do not use the rotisserie motor in rain or wet conditions.
- The motor housing may become hot during use. Do not touch immediately after operation.
- Ensure the BBQ is placed on a stable, level, and non-combustible surface before use.
- Do not overload the rotisserie spit. Uneven or excessive weight may damage the motor.
- Ensure food is securely fastened using the supplied forks before operating the rotisserie.
- Keep hands, loose clothing, jewelry, and hair away from moving parts during operation.
- Never touch the rotisserie shaft, forks, or food while rotating.
- Do not operate the rotisserie without proper installation onto the BBQ brackets.
- Remove batteries if the unit will not be used for an extended period.
- Do not mix old and new batteries or different battery types.
- Dispose of used batteries responsibly in accordance with local regulations.
- Do not expose batteries to excessive heat, fire, or direct sunlight.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities unless supervised.

BATTERY INFORMATION

- Battery Type: 2 × D batteries (Not included)
- Insert batteries according to the polarity markings (+/-) inside the battery compartment.
- Ensure the battery compartment cover is securely fitted before use.

OPERATING INSTRUCTIONS

Before First Use

- Remove all packaging materials and protective films.
- Check that all parts are securely assembled.
- Ensure batteries are correctly installed.

Installation

1. Attach the rotisserie brackets securely to the BBQ body as shown in the assembly instructions.
2. Insert the rotisserie shaft through the food item centrally.
3. Secure the food using the supplied meat forks.
4. Position the shaft onto the support brackets.
5. Attach the motor unit securely to the mounting bracket.
6. Insert the shaft into the motor drive opening.

Operation

1. Switch the motor ON using the power switch.
2. Confirm the shaft rotates smoothly before cooking.
3. Monitor the BBQ during operation at all times.
4. Turn the motor OFF after cooking is complete.

CLEANING & MAINTENANCE

- Allow all components to cool completely before cleaning.
- Remove batteries before cleaning or storage.
- Do not immerse the motor unit in water or any liquid.
- Clean the shaft and forks with warm soapy water.
- Wipe the motor housing with a soft damp cloth only.
- Dry all components thoroughly before storage.

STORAGE

- Store indoors in a dry location.
- Remove batteries before long-term storage to prevent battery leakage.


The logo for Jumbuck, featuring the brand name in a bold, lowercase, sans-serif font. The letters are white and are set against a dark grey rectangular background. This background is itself centered within a larger, light grey semi-circular shape that forms the base of the page design.

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

Assembly Instructions







PARTS DIAGRAM


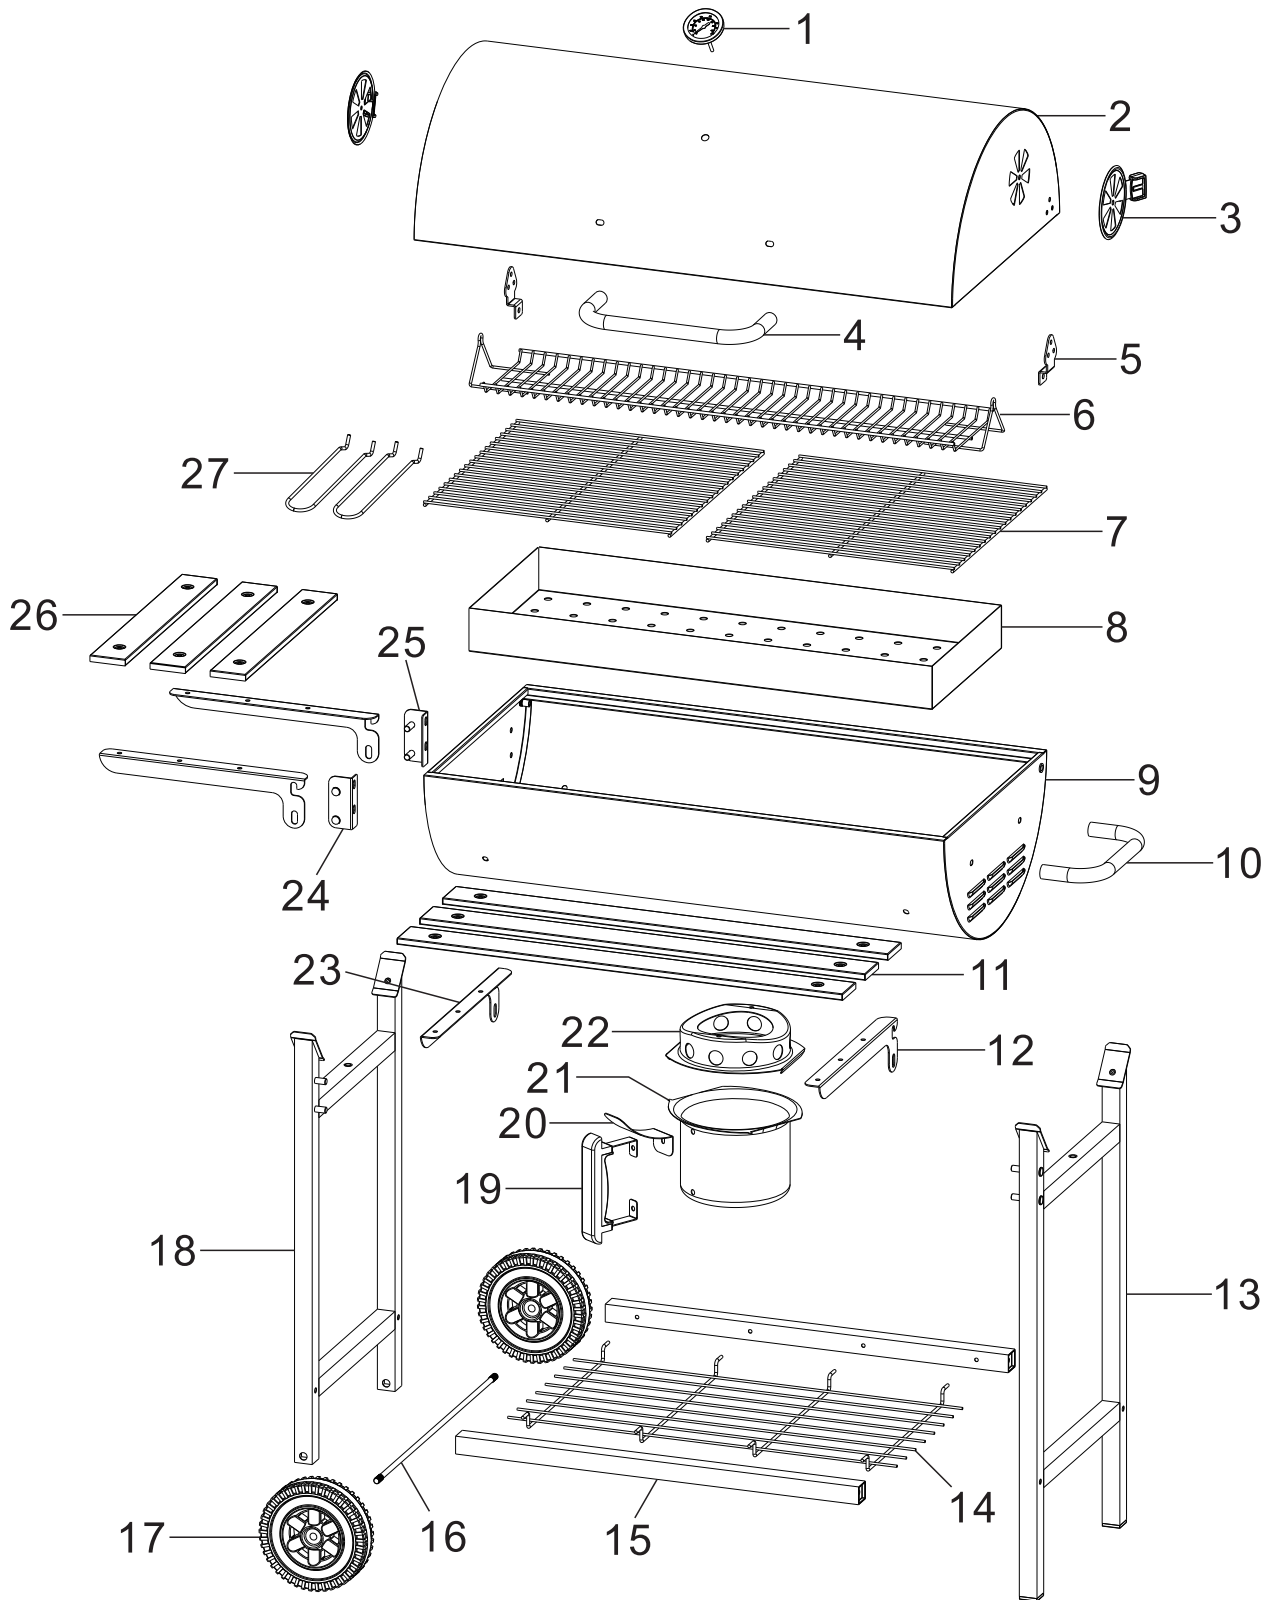


jumbuck

Hooded Charcoal BBQ

      With Battery Powered Spit Roaster

1		x1
2		x1
3		x2
4		x1
5		x2
6		x1
7		x2
8		x1
9		x1
10		x1
11		x3
12		x2
13		x1
14		x1
15		x2
16		x1

  17		x2
18		x1
19		x1
20		x1
21		x1
22		x1
23		x2
24		x1
25		x1
26		x3
27		x2

jumbuck

Hooded Charcoal BBQ


With Battery Powered Spit Roaster

Bolt pack

A	M6x40 	x4	H	M8 	x2
B	M5x35 	x2	I	M6 	x6
C	M6x25 	x4	J	M5 	x24
D	M6x16 	x6	K	Ø6x16 	x14
E	M6x12 	x6	L	Ø5x12 	x2
F	M5x16 	x12	M	M6x20 	x2
G	M5x12 	x8			

STEP 1

 A: M6x40 (4pcs)

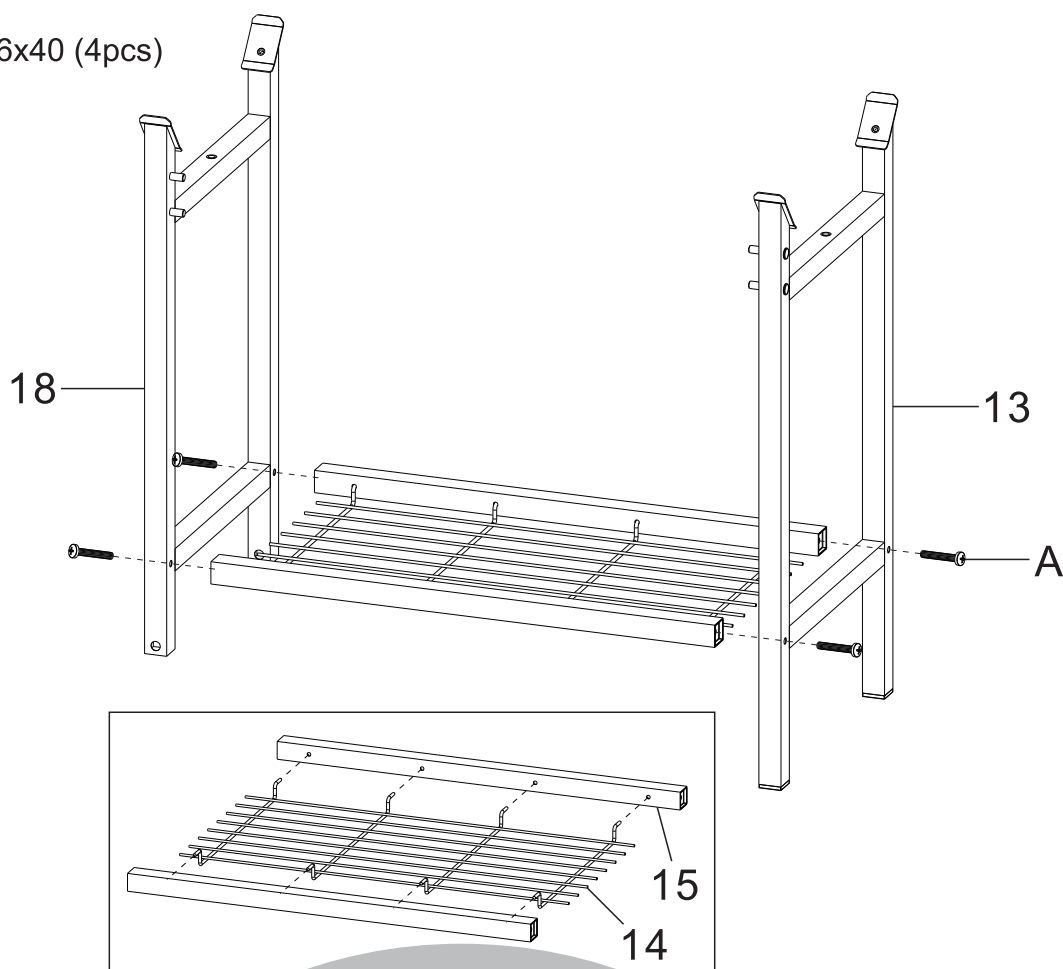

jumbuck


Hooded Charcoal BBQ

With Battery Powered Spit Roaster

STEP 2



H: M8 (2pcs)

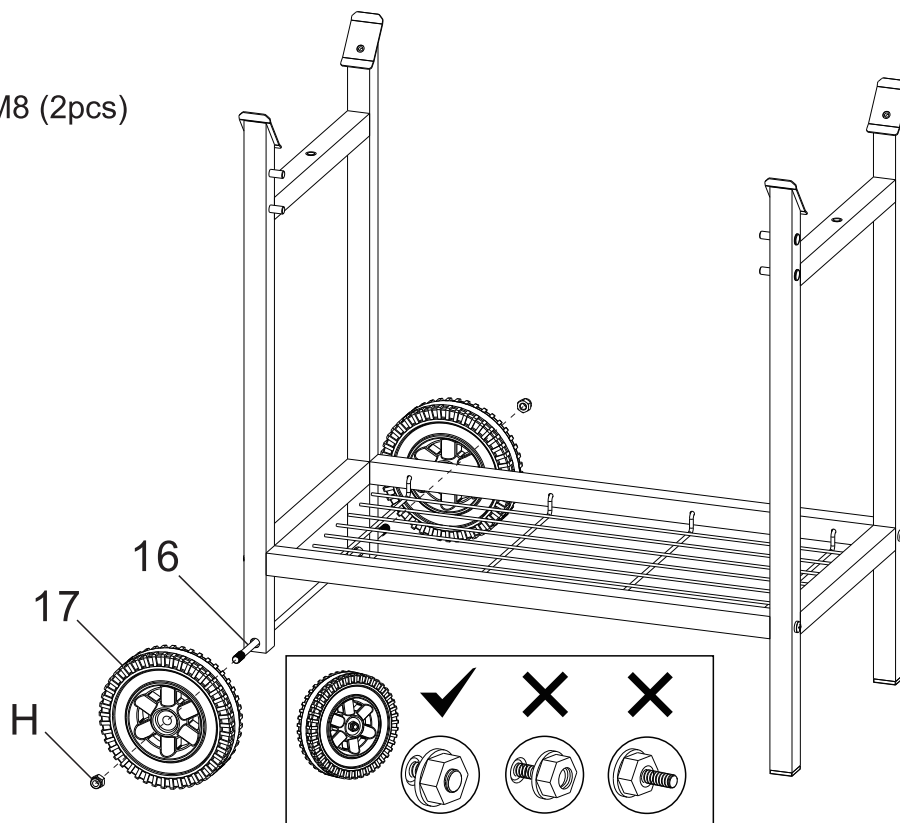


STEP 3



D: M6x16 (6pcs)



K: Ø6x16 (6pcs)

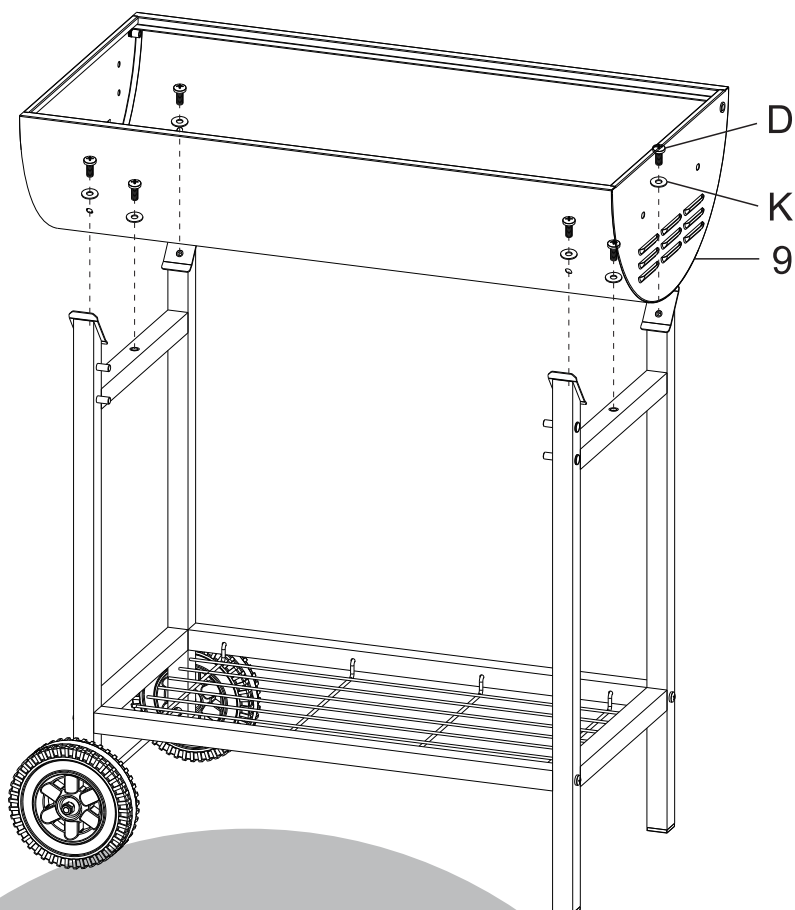

jumbuck

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

STEP 4

 C: M6x25 (2pcs)


 E: M6x12 (4pcs)

 F: M5x16 (6pcs)

 I: M6 (4pcs)

 J: M5 (6pcs)

 K: Ø6x16 (6pcs)

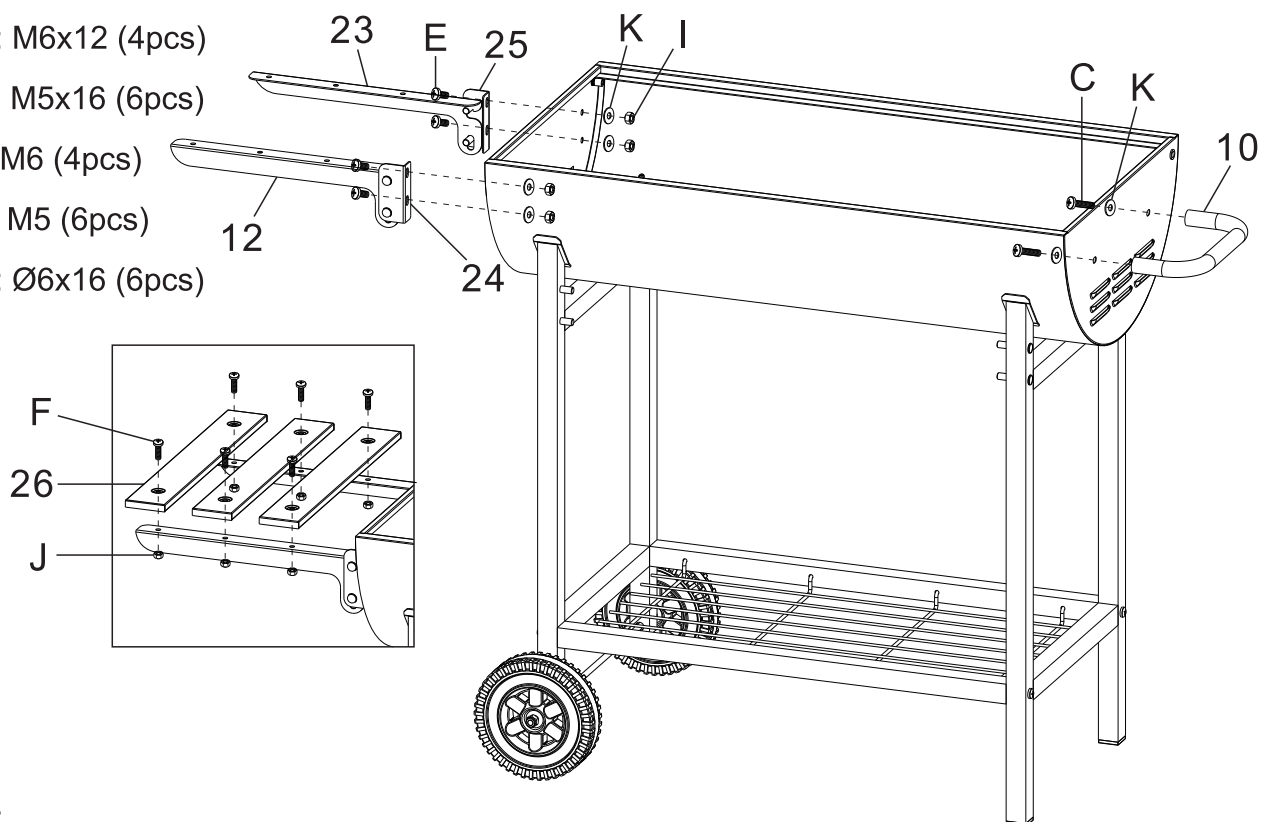

STEP 5


 E: M6x12 (2pcs)

 G: M5x12 (2pcs)

 I: M6 (2pcs)

 J: M5 (2pcs)

 L: Ø5x12 (2pcs)

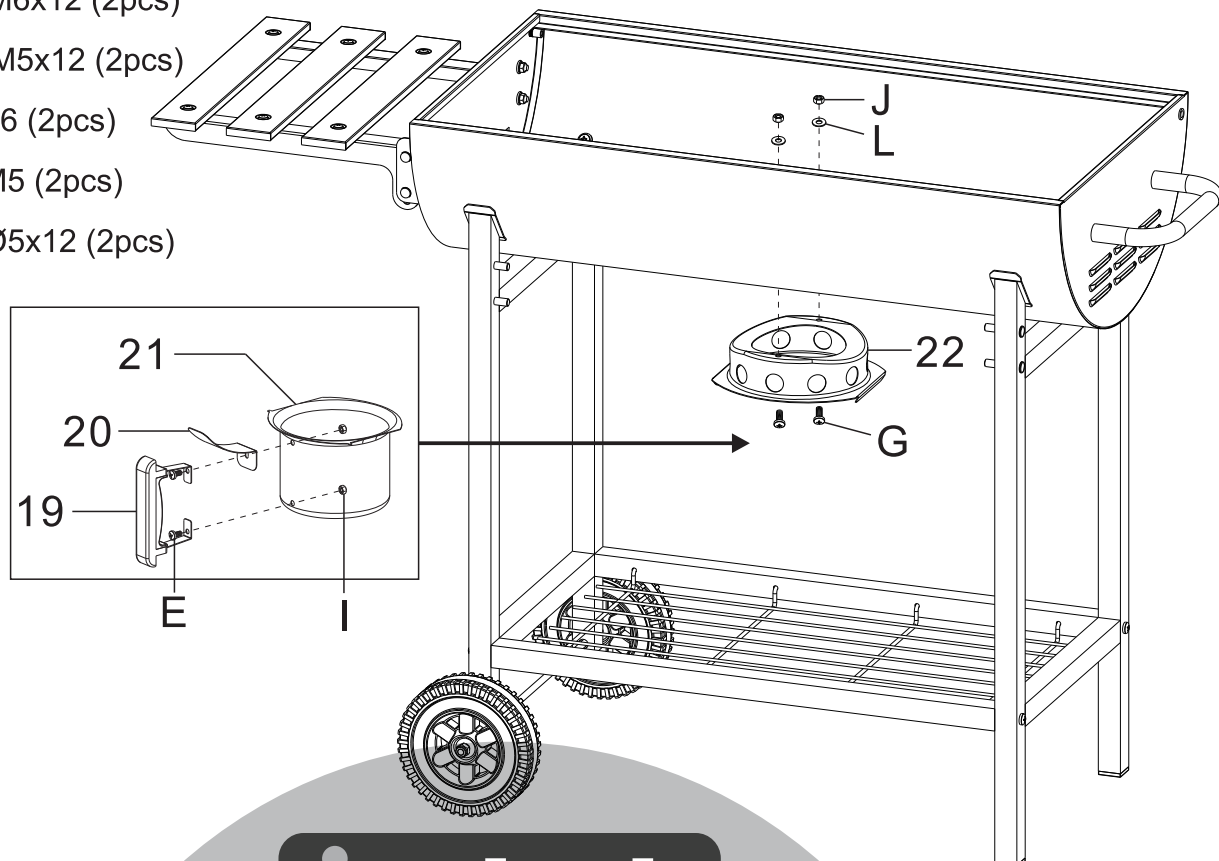

jumbuck



Hooded Charcoal BBQ

With Battery Powered Spit Roaster

STEP 6

 F: M5x16 (6pcs)

 J: M5 (6pcs)

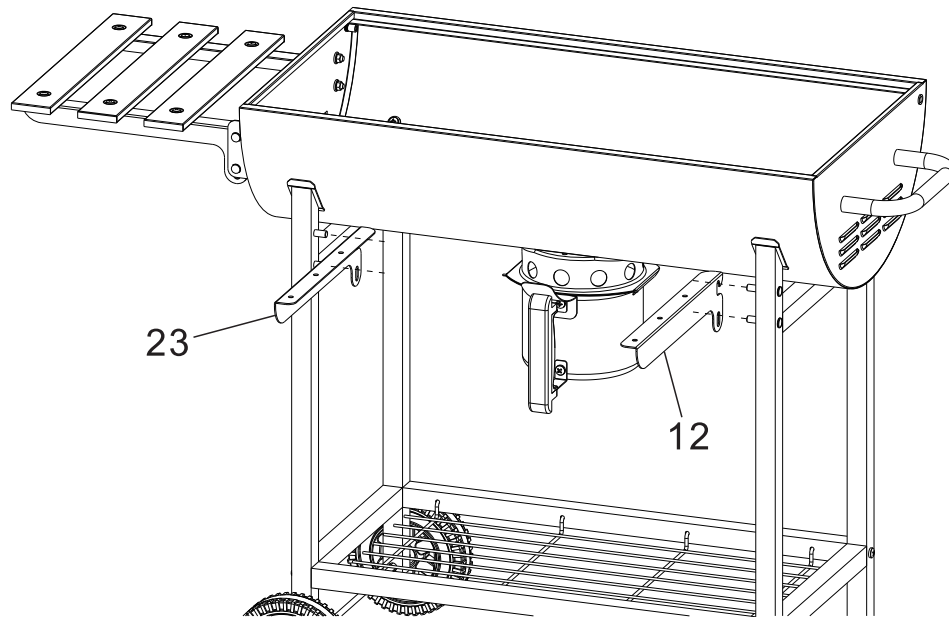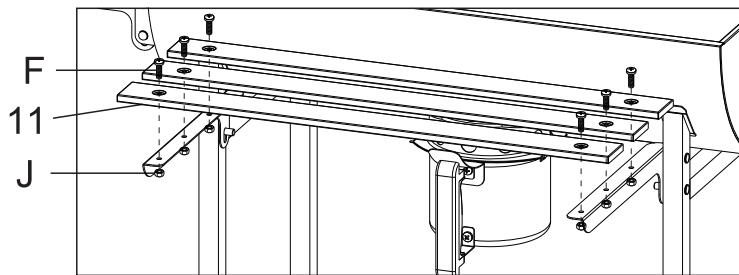


STEP 7

 C: M6x25 (2pcs)

 G: M5x12 (6pcs)

 J: M5 (6pcs)

 K: Ø6x16 (2pcs)

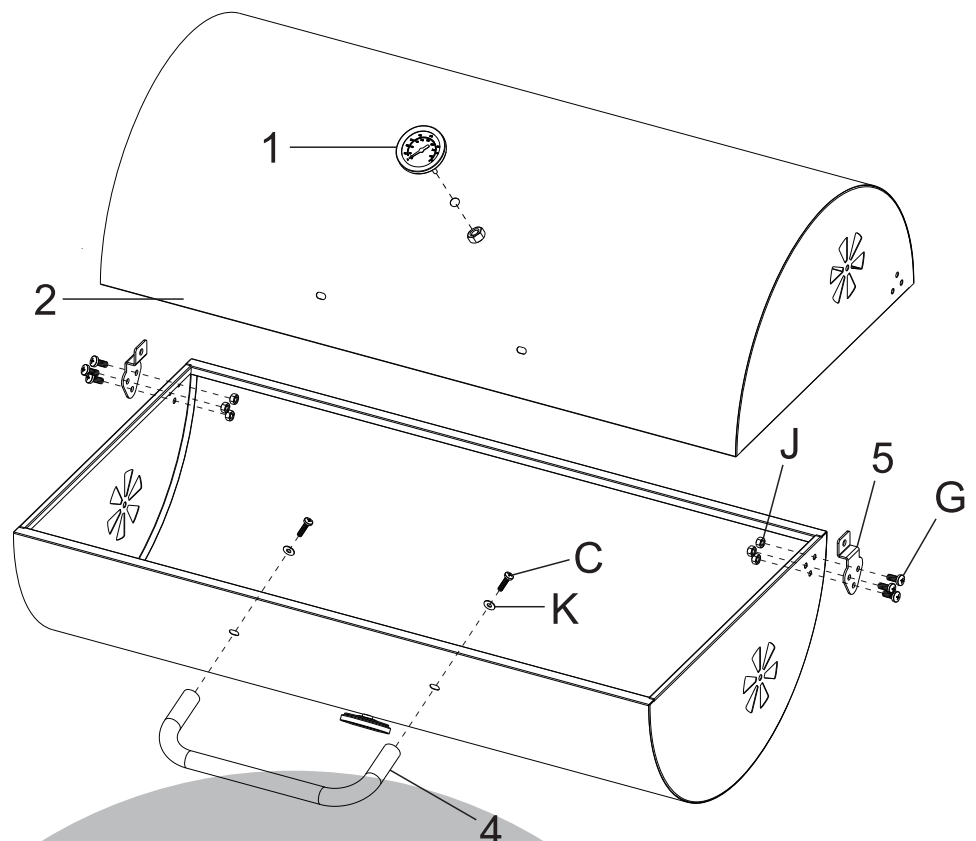

jumbuck


Hooded Charcoal BBQ

With Battery Powered Spit Roaster

STEP 8


 B: M5x35 (2pcs)

 J: M5 (4pcs)

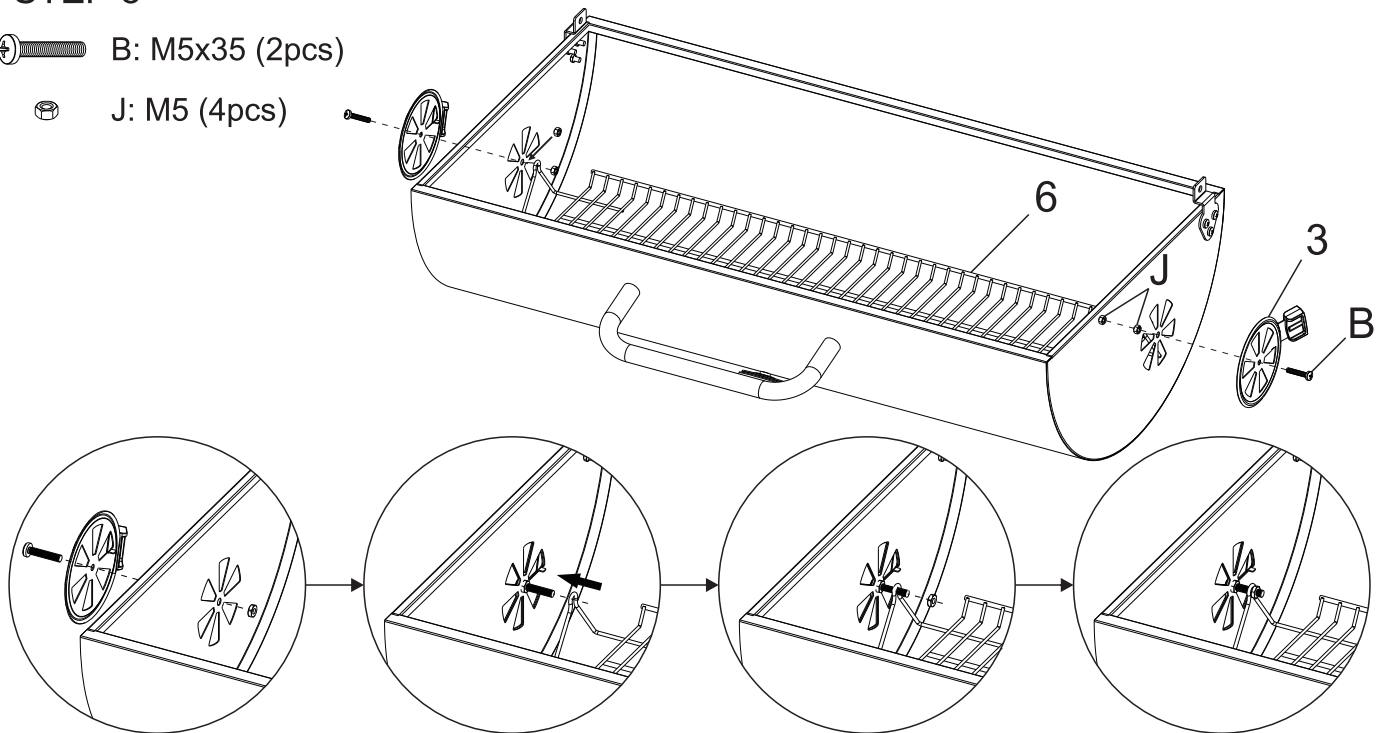

STEP 9

 M: M6x20 (2pcs)

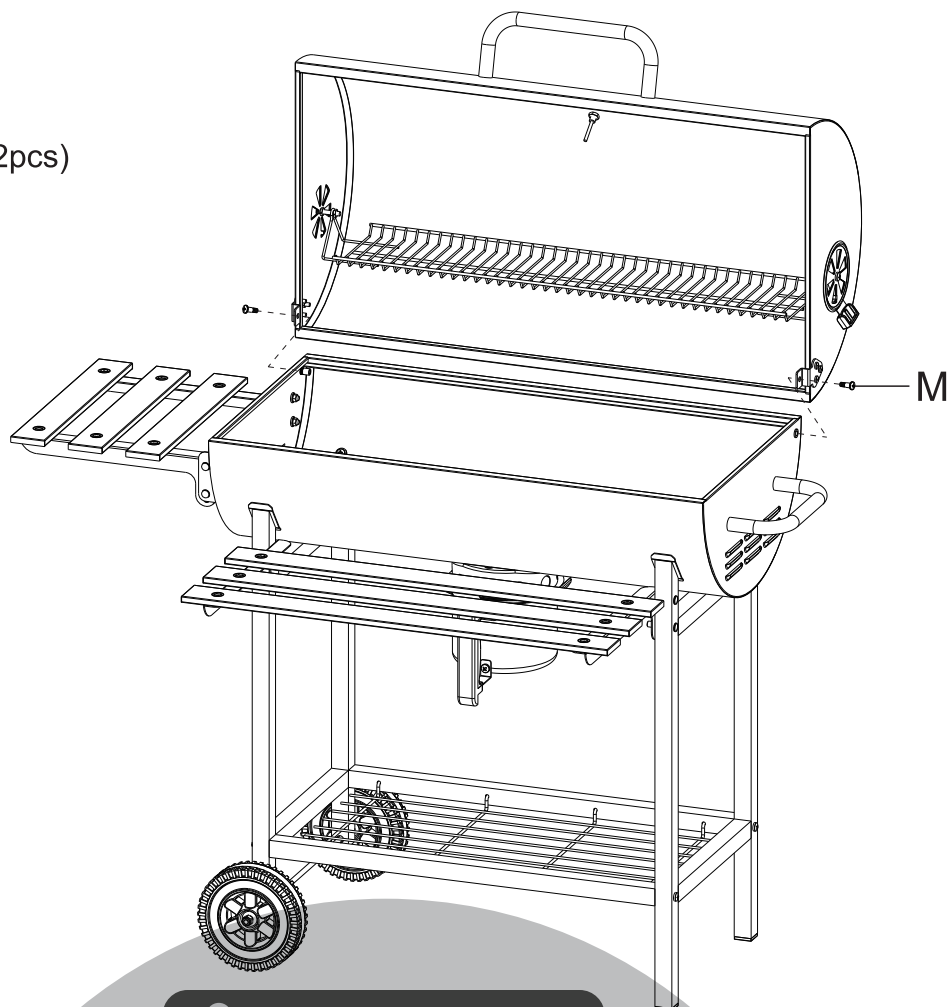


jumbuck


Hooded Charcoal BBQ

With Battery Powered Spit Roaster

STEP 10

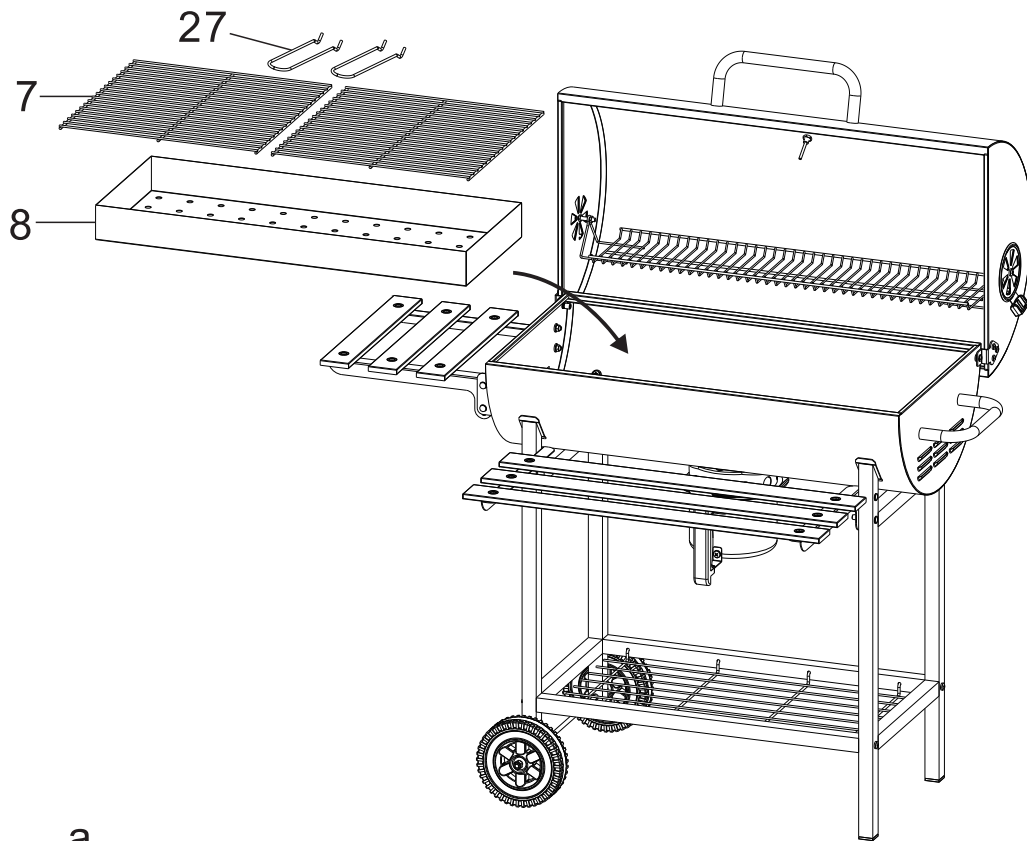

STEP 11

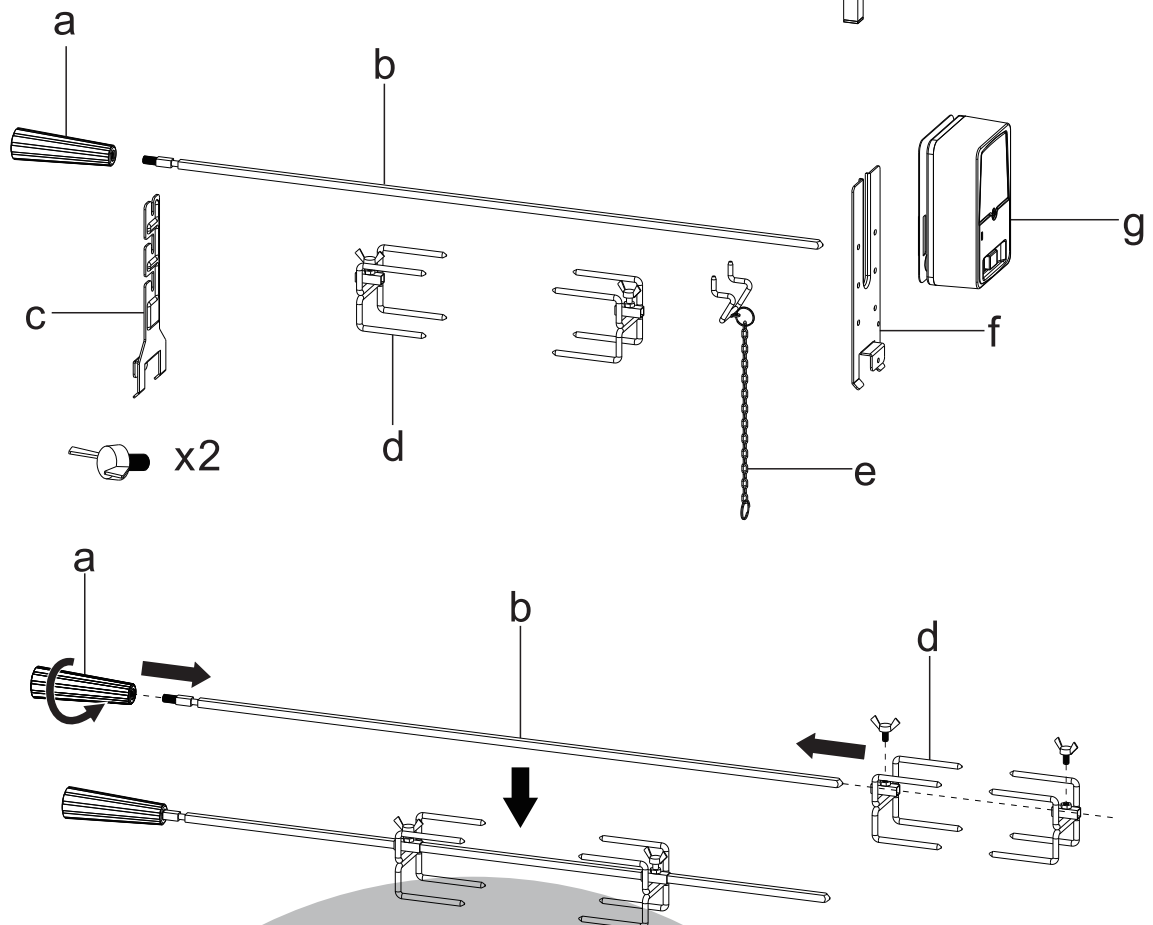


jumbuck

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

STEP 12

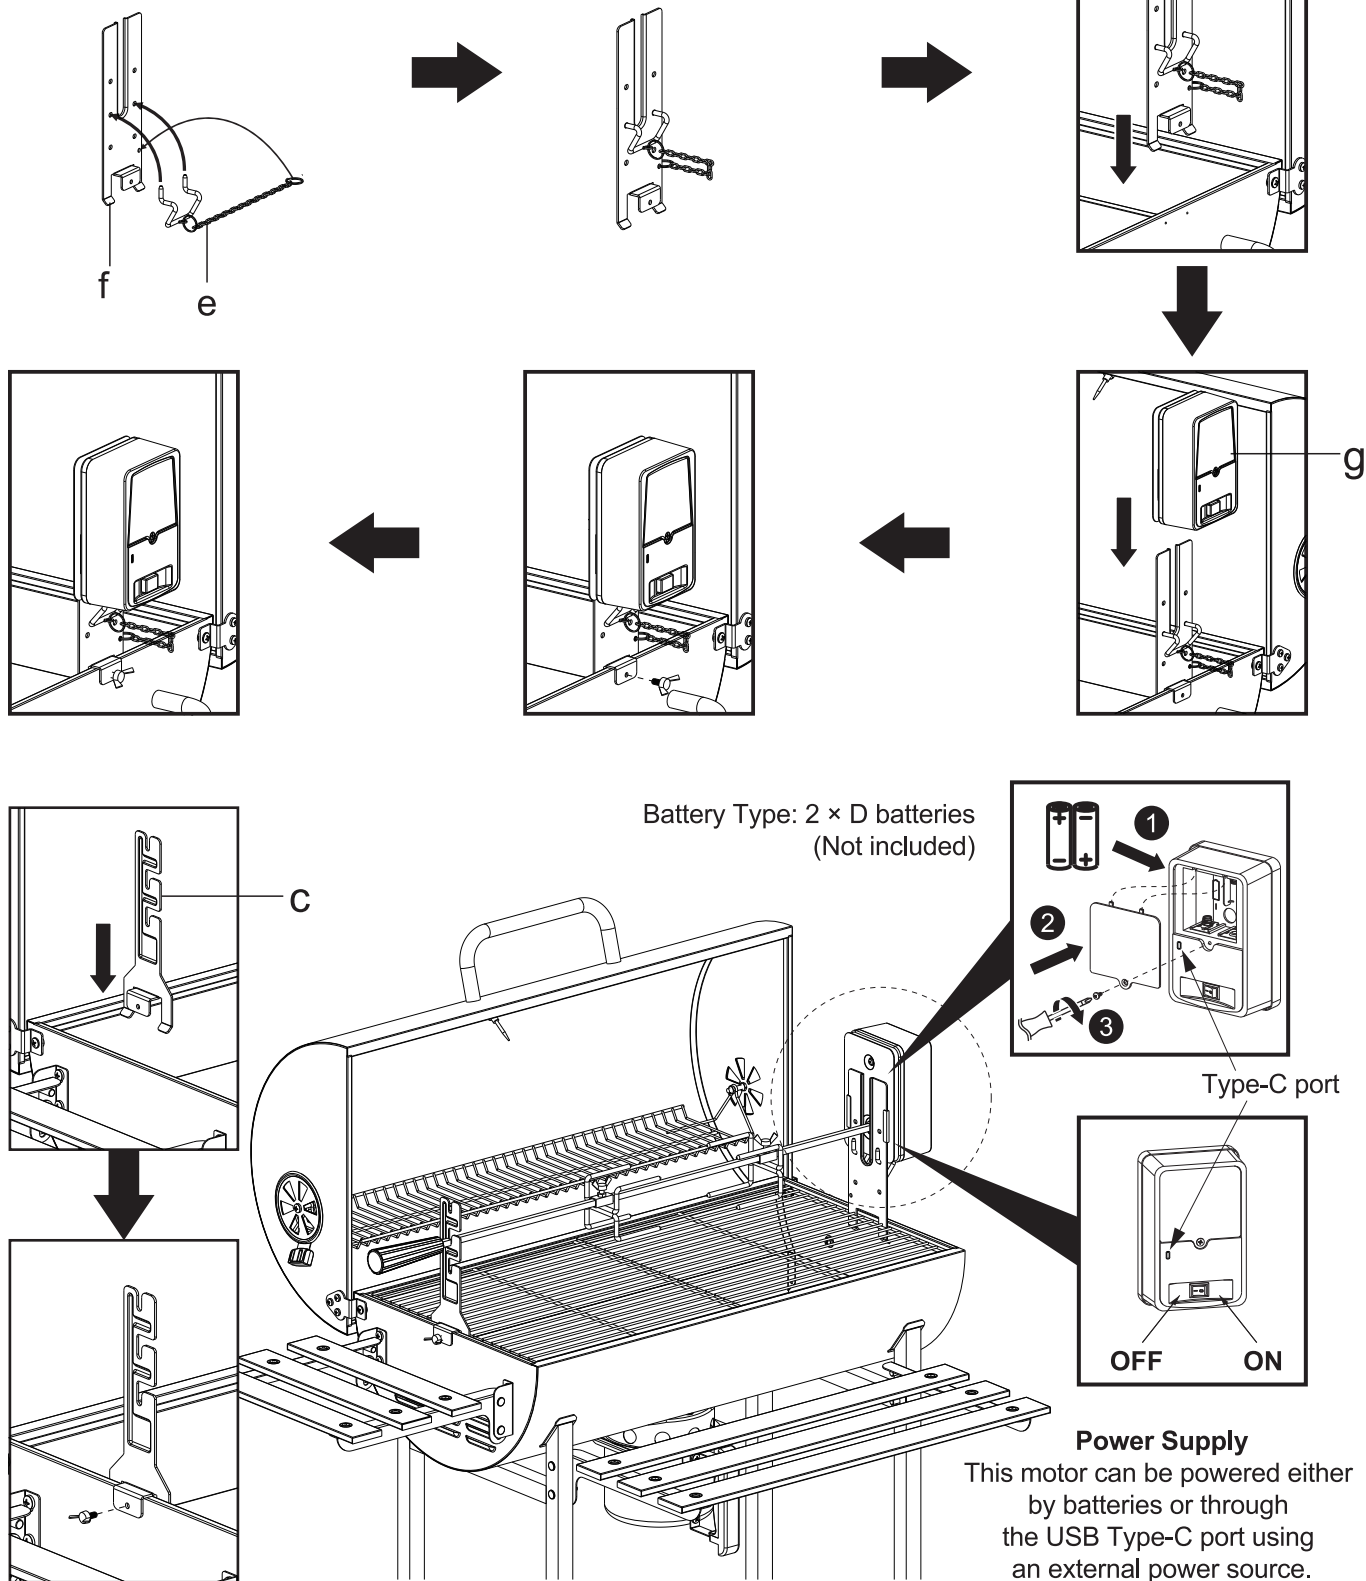

Caution

Remove all batteries before using external USB Type-C power.
Do not use battery power and external USB power at the same time.
USB Type-C cable and power adapter are not included.


External USB power may be supplied by:
a 230V mains outlet with a suitable
USB adapter, or a portable power bank.

jumbuck

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

LIST OF SPARE PARTS

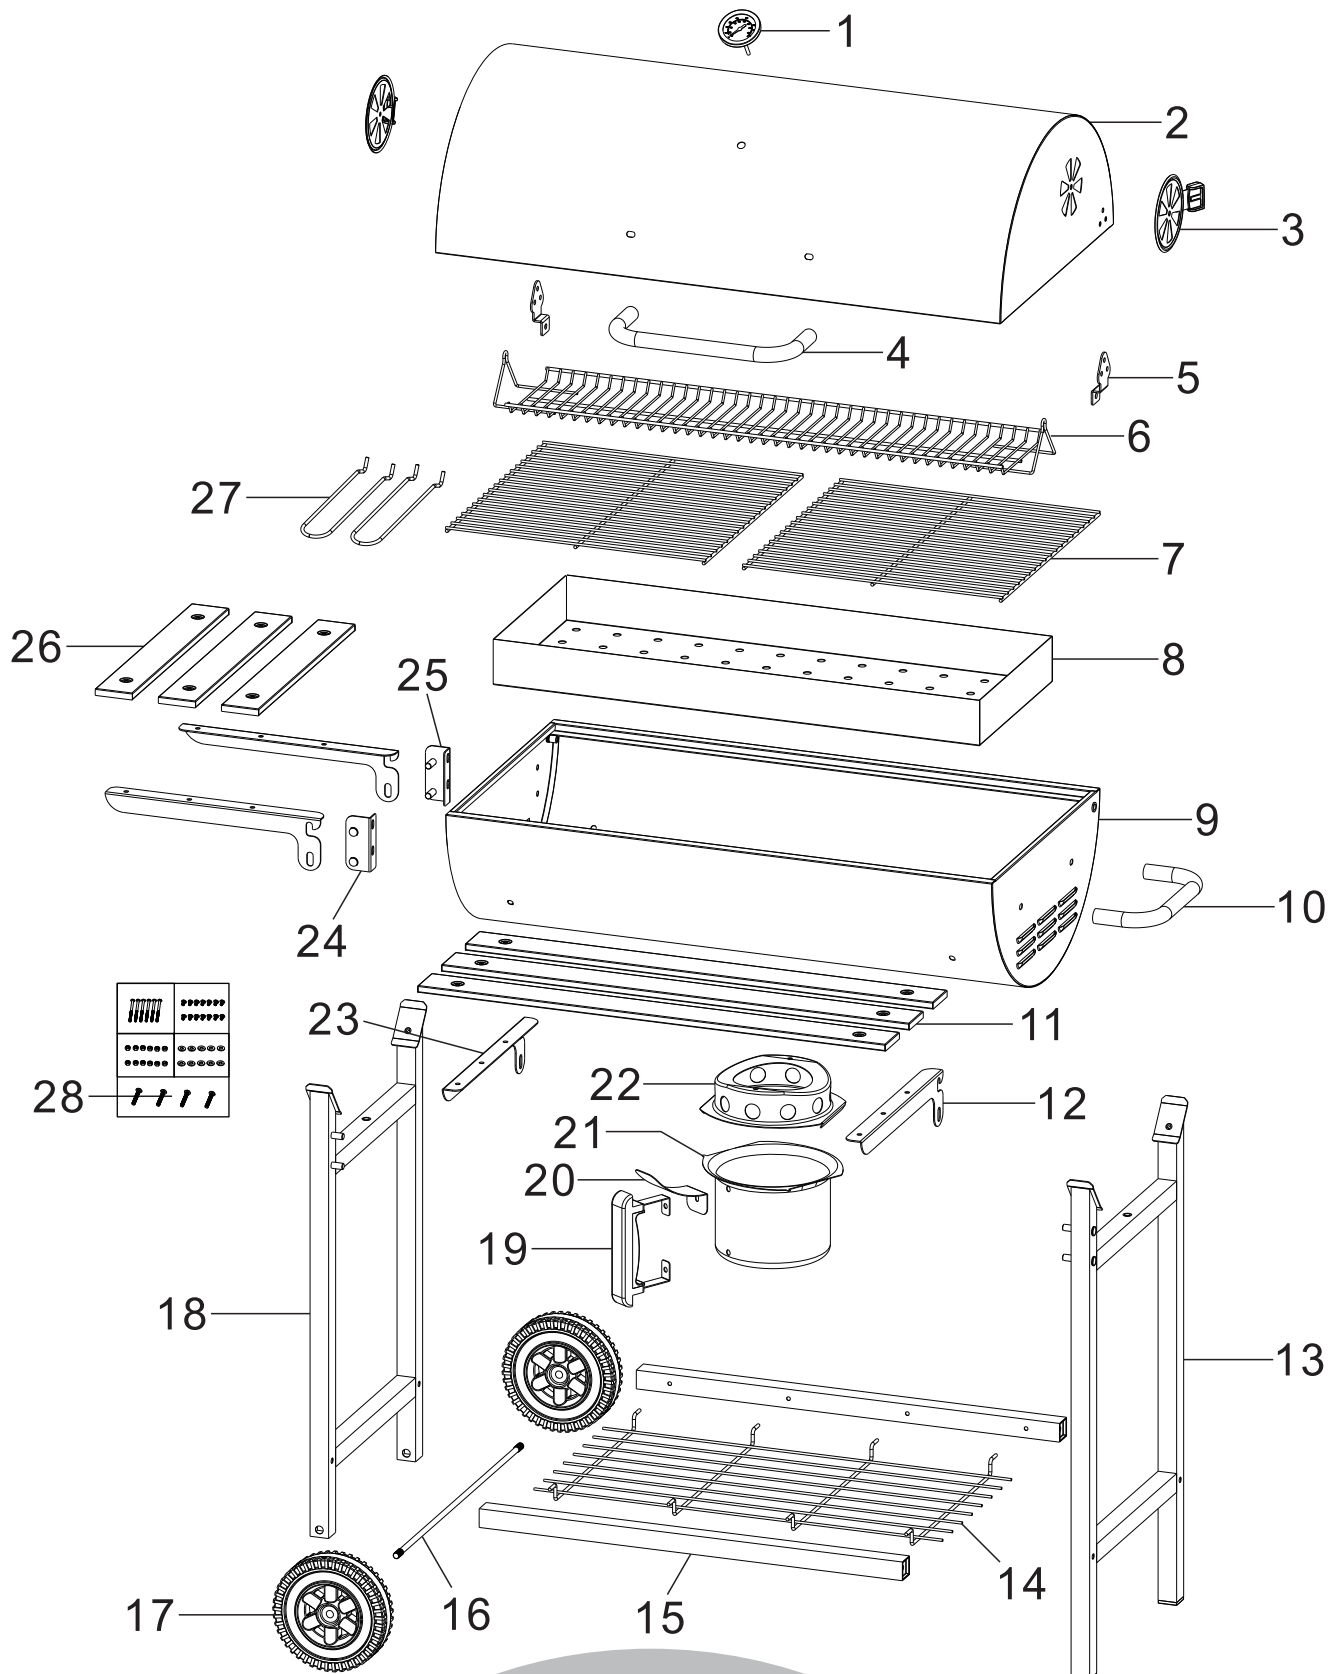

jumbuck

Hooded Charcoal BBQ

With Battery Powered Spit Roaster

PART NUMBER	PART NAME	Hooded CharcoalBBQ with Spit Roaster
1	Thermometer	K1CL0-00501-00000-000
2	Hood	K1CL0-00601-04050-137
3	Air vent	K1CL0-00301-04075-111
4	Hood Handle	K1CL0-00701-01000-074
5	Hinge for Gill Lid	K1CL0-00801-04200-137
6	Warming Grild	K1CL0-00901-01000-082
7	Cooking Grild	K1CL0-01001-01000-082
8	Charcoal Pan	K1CL0-01101-04075-111
9	Grill body	K1CL0-00201-04050-137
10	Grill body Handle	K1CL0-01201-01000-137
11	Front table	K1CL0-01301-04???-009
12	Right Side table support	K1CL0-01401-04150-009
13	Long Leg	K1CL0-01501-01000-009
14	Storage shelf	K1CL0-01601-01000-074
15	Metal brace	K1CL0-01701-01000-009
16	Axle	K1CL0-01801-01000-074
17	Wheel	K1CL0-01901-13000-000
18	Short Leg	K1CL0-02001-01000-009
19	Ash Handle	K1CL0-02101-00000-000
20	Ash Handle separator	K1CL0-02201-04080-074
21	Ash Connector-Bottom	K1CL0-02301-04080-137
22	Ash Connector-Top	K1CL0-02401-04080-137
23	Left front table support	K1CL0-02501-04150-009
24	Hinge for side table(R)	K1CL0-02601-04150-074
25	Hinge for side table(L)	K1CL0-02701-04150-074
26	Side table	K1CL0-02801-04???-009
27	Cooking Grild Handle	K1CL0-02901-01000-082
28	Bolt pack	BP-BUN-897-000

Do not return to place of purchase.
Keep your purchase receipt, this will be required to
make any claims under the 12 month warranty.

The Jumbuck logo is centered within a dark gray rounded rectangle, which is itself set against a light gray semi-circular background at the bottom of the page. The word "jumbuck" is written in a bold, lowercase, sans-serif font, with a small dot above the letter 'j'.

jumbuck