jumbuck®

12 MONTH WARRANTY

48cm Charcoal BBQ with Grill

- Cooking Surface - W 405 x D 435 mm
- Red Powder Coated Steel Lid
- Black Enamel Coated Steel Body
- 430 Grade Stainless Steel Air Vents in Lid and BBQ Body
- Chrome Plated Cooking Grill
- Nickel Plated Lid Lock
- Heat Resistant Bakelite Handle
- Dimensions - L 500 x W 475 x H 800 mm

Solid Fuel

Grill x 1

Grill

Before using the BBQ, remove any packaging material within and around the BBQ supplied for protection during transit.

Important: Please retain these instructions for future use

Model No.B333

CHARCOAL BBQ

Contents

FEATURES & BENEFITS	3
WARNING AND SAFETY INFORMATION	4
DAMEGE CAUSED BY FAT FIRES ARE NOT COVERED BY THE WARRANTY	5
PARTS DIAGRAM	6
BOLT PACK	7
ASSEMBLY INSTRUCTIONS	8
LIST OF SPARE PARTS	13
WARRANTY	15

CONTACT IN FORMATION

For service and warranty enquiries, go to Garth Support

www.garthsupport.com

or call 1800 427 841

jumbuck

Charcoal BBQ

Features & Benefits

ZONED COOKING™

Cook a variety of foods at the same time. Higher temperatures at the back and lower at the front save time, money and effort.

BARBEQUE DIMENSIONS

	Length	Width	Height
Total Set	500mm	475 mm	800 mm

CHARCOAL BBQ

Warning and safety information

- **'DO NOT USE INDOORS'.**
- **WARNING! Carbon Monoxide Hazard.**
- Burning charcoal inside can kill you. It gives off Carbon Monoxide, which has no odour. Never burn charcoal in enclosed spaces such as tents, home/building, vehicle or garage.
- **WARNING! Keep children and pets away.**
- **ATTENTION! This barebecue will become very hot, do not move during operation. Allow the grill to cool before moving.**
- **CAUTION! Do not use spirit or petrol for lighting or re-lighting the barbecue!**
- Do not use this barbecue under any overhead combustable construction
- Never use this barbecue on boats or other recreational vehicles.
- This barbecue should not be left unattended while in use.
- You should exercise reasonable care when operating your barbecue.
- This barbecue is not designed for commercial use and doing so will void its warranty.
- This barbecue is for outdoor use only. If used in enclosed spaces such as a building or garage toxic fumes will build up and may cause death or serious injury.
- Always use the barbecue in a well ventilated area, but out of high winds.
- Position the barbecue so that winds do not carry hot ash onto combustible surfaces.
- Do not use this barbecue without first reading the operating instructions carefully .
- Improper assembly of the barbecue may be dangerous. Please follow all the assembly instructions carefully before lighting the barbecue. Altering the barbecue in any way from the manufacturer's instructions may be dangerous and will void all warranties.
- Make sure the ash collection cup/tray is securely attached and the air vents are clean and clear before you light the barbecue.
- When lighting the barbecue ensure you do not have any loose clothing touching or near the coals.
- Always wear barbecue mitts and protective clothing when lighting the barbecue with a chimney starter or when adding more fuel to the barbecue.
- Ensure the barbecue is on a solid, flat and level non combustible surface before lighting.
- Do not add firelighters or any other barbecue lighting material to a barbecue that is hot or warm.
- Remove the lid from the barbecue while lighting and getting the charcoal started
- Do not use water to control flare-ups or to extinguish charcoal, as it may damage the enamel finish.Slightly close the bottom air vents and put the lid on the bowl.
- Extinguish coals when finished cooking. Close all air vents after putting the lid on.
- Do not store or use petrol or any other flammable vapours or materials within 8 meters of this barbecue.
- Keep all combustible items and surfaces at least 150cm away from the barbecue at all times. This includes, but is not limited to,wooded decks both treated and untreated.
- Keep the grilling area free from combustible materials, petrol and other flammable vapours or liquids.
- Keep all electrical cables away from the hot surfaces of the barbecue.
- Do not touch metal parts of the barbecue until it has completely cooled. Wear barbecue mitts when adjusting air vents or lifting the lid.
- Do not touch the grills, charcoal or any part of the barbecue to see if they are hot.
- Never move the barbecue while in use and wait until the coals are completely extinguished and cold before attempting to move the barbecue.
- Always open the lid carefully as steam and heat builds up inside the barbecue and can cause serious injury.

Caution

- Regularly check and clean the barbecue to avoid any build up of fats which may cause a fat fire and would void your warranty.
- Lining the bowl with aluminium foil will obstruct the airflow. Instead, use a drip pan to catch the drippings from meat when cooking by the indirect method.

Charcoal BBQ

DAMAGE CAUSED BY FAT FIRES ARE NOT COVERED BY THE WARRANTY

- Always empty the ash cup/ash tray after every use. Do not remove the ash until it is completely extinguished and cold.
- Using abrasive cleaners on the barbecue or grills will damage the finish and void the warranty.
- Using sharp objects to clean the bowl and hood will damage the finish and void the warranty. Wash grills after EVERY cooking session.
- Allow the complete barbecue to cool before cleaning and washing in a warm soapy solution. Ensure that any dried fat and food deposits are cleaned off the grills with hot, soapy water then rinse and dry before returning the grills to the barbecue.

Lighting your charcoal barbeque

Ensure the lid is open, the air vents on the top and bottom of the barbeque are open.

Remove any ash left from the previous barbeque (this can only be done once the coals are fully extinguished and cold).

When lighting coal directly on the charcoal tray, pile the required quantity of briquettes into a pyramid on top of 3 or 4 firelighters. Ignite the firelighters and leave the hood open. The coals should be ready to cook over in 30-40 minutes, when all briquettes have a covering of 'grey' ash. Arrange the lit coals with long handled tongs.

When using a firestarter chimney, put the required amount of briquettes into the top of the chimney above the internal grate. Stand the Firestarter on the barbecue charcoal pan over scrunched up newspaper or 1-2 firelighters, then ignite. The briquettes will be ready for cooking in 20-25 minutes. Pour the hot coals out of the Firestarter onto the charcoal tray. Always use BBQ Mitts when handling the Firestarter.

Aim for an even layer of coals, 3-4cm deep in the required area under the cooking grills. Always put the charcoal or briquettes on the charcoal pan and never directly into the bottom of the barbeque bowl. Failure to do so may cause damage to the barbeque which is not covered by the warranty.

Charcoal must only be placed on the charcoal pan and NEVER on the bottom of the fire bowl. Failure to do this will damage the bottom of the fire bowl and will not be covered by the waranty.

Maintenance of your barbeque

Protection

Keep your barbeque beneath a protective cover and out of the rain when not in use. Store your clean charcoal barbeque in a dry, well ventilated area over winter.

Cleaning

To clean barbecue for next time, take a long handled brush and brush the cooking surface to remove excess oils and food scraps. Be careful as surfaces may be hot. Protect your hands by using an oven mitt to hold the brush.

Allow to cool before washing in a warm soapy solution. Ensure that any dried fat/food deposits are cleaned off the grills after EVERY cooking session. Wash the grills with hot, soapy water then rinse and dry the grills before returning them to the barbeque.

Charcoal BBQ

PARTS DIAGRAM

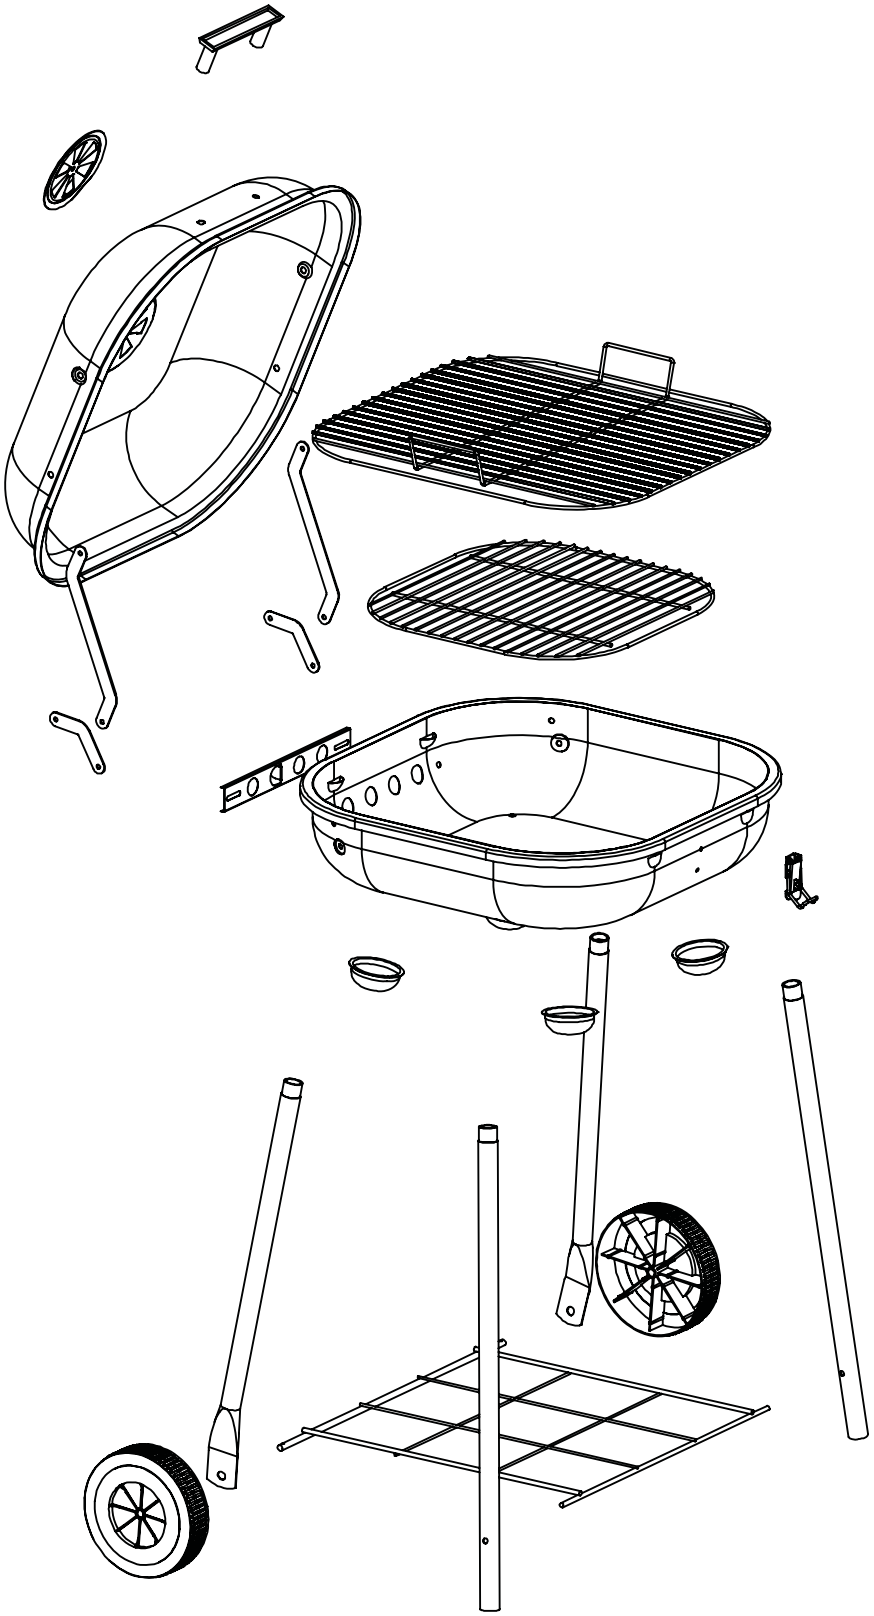

BOLT PACK

A			4PCS
B		M5x10	11PCS
C		∅6x∅12	8PCS
D		M5	11PCS
E		M3x8	2PCS
F		M3	2PCS
G		M6x25	4PCS
H		∅6x∅25	4PCS
I		M6x12	2PCS

CHARCOAL BBQ

ASSEMBLY INSTRUCTIONS

1. Ax4

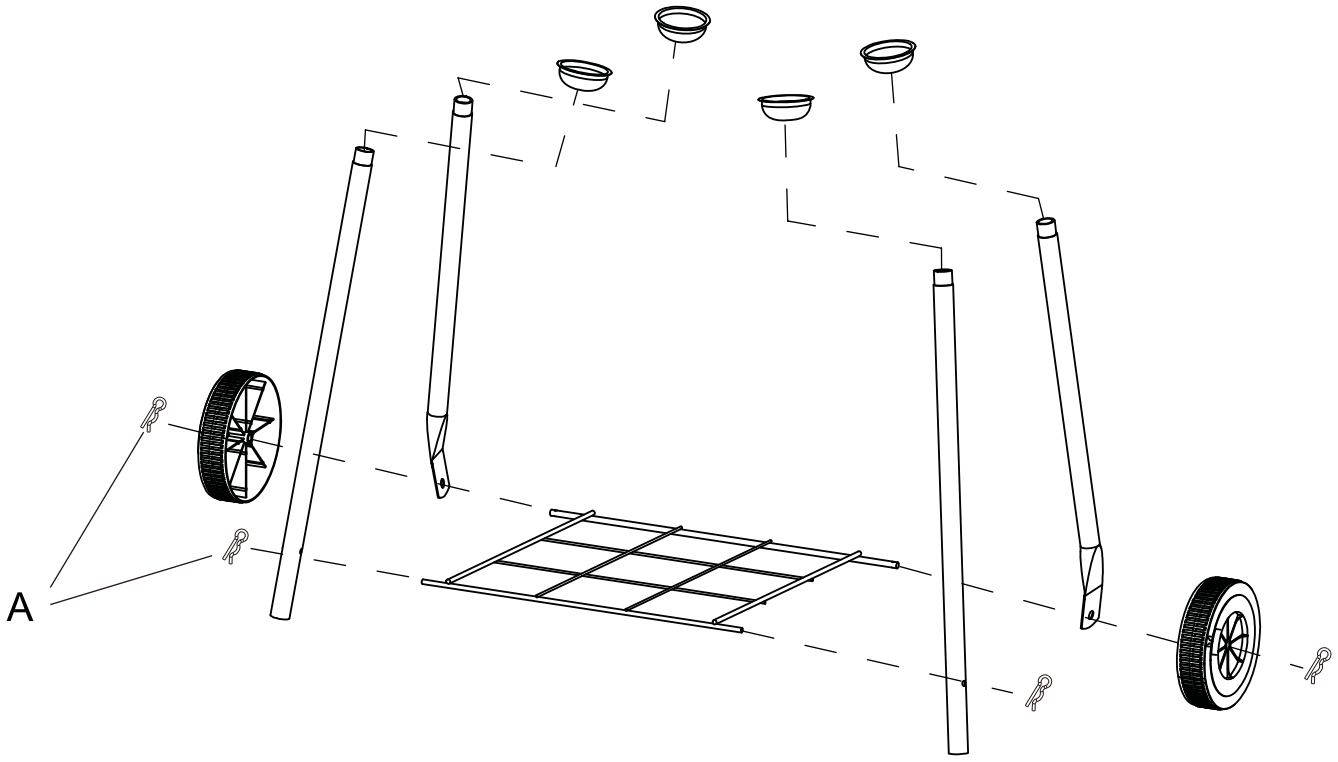

2.

Bx2	M5x10
Cx2	∅6x∅12
Dx2	M5
Ex2	M3x8
Fx2	M3
Gx4	M6x25
Hx4	∅6x∅25

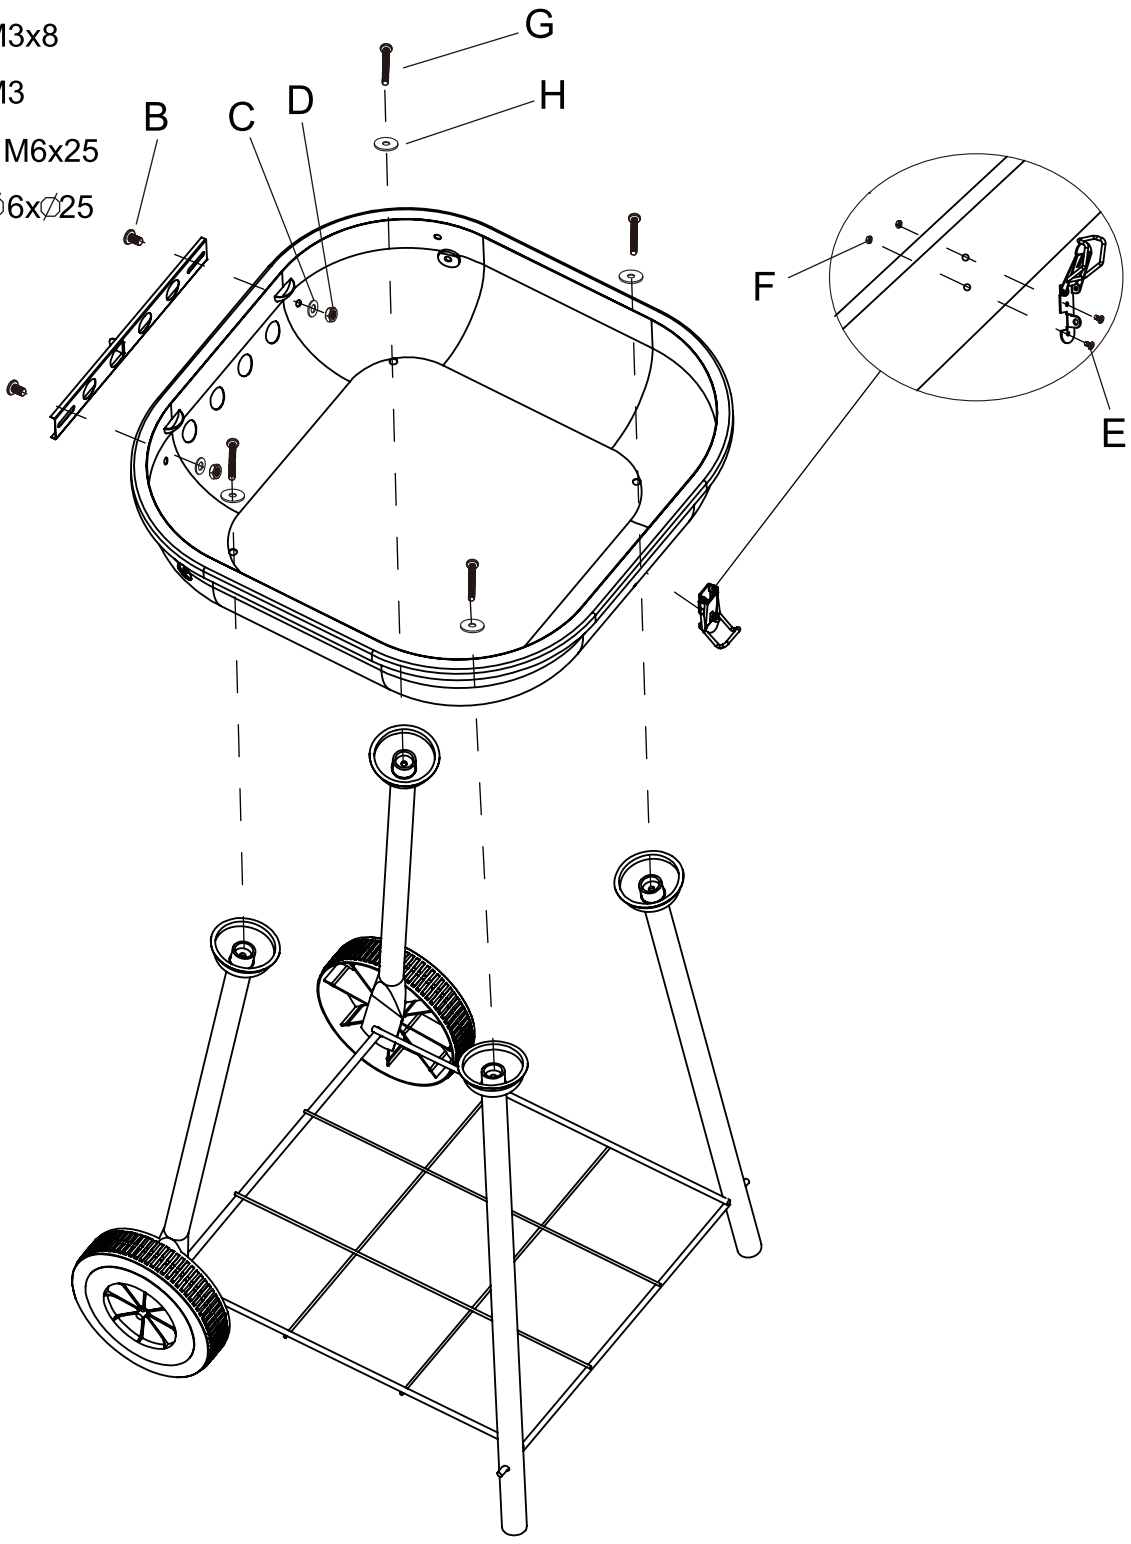

3.

Bx5	M5x10
Cx2	∅6x∅12
Dx5	M5
Ix2	M6x12

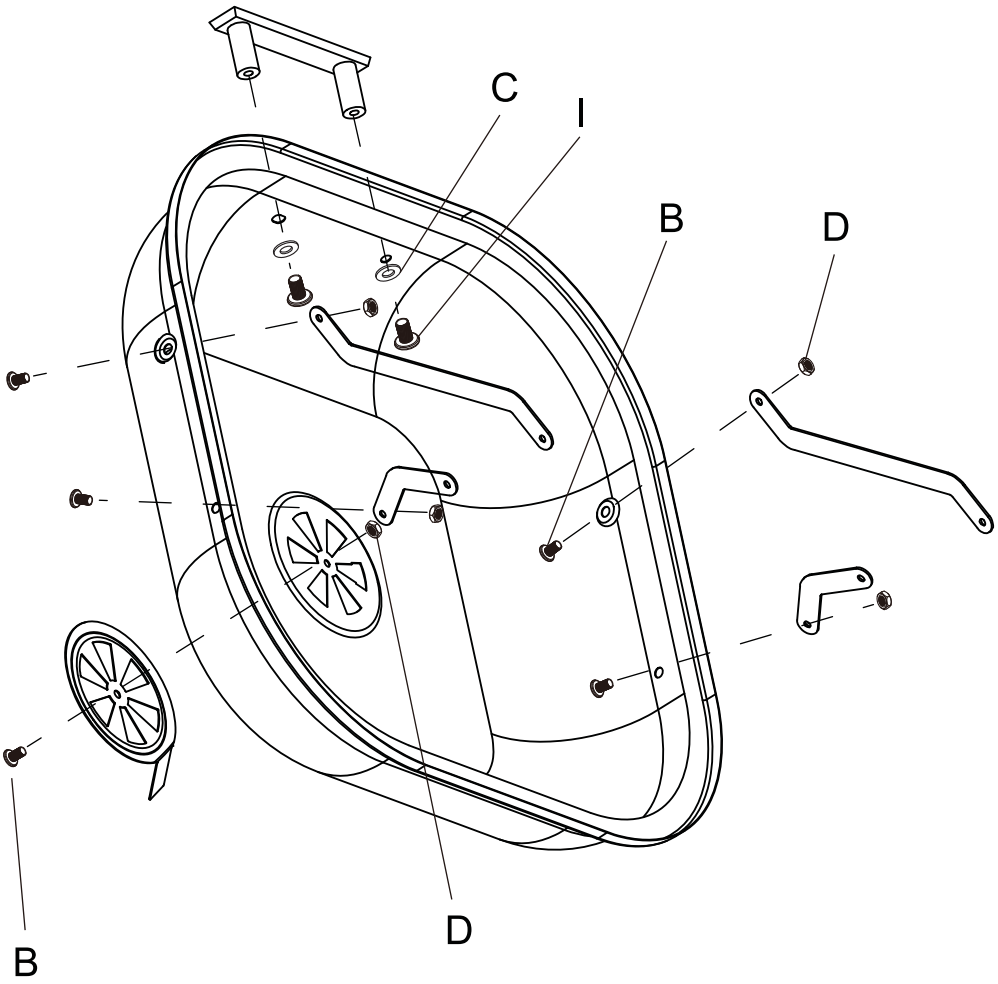

4. Bx4 M5x10
   Cx4 ∅6x∅12
   Dx4 M5

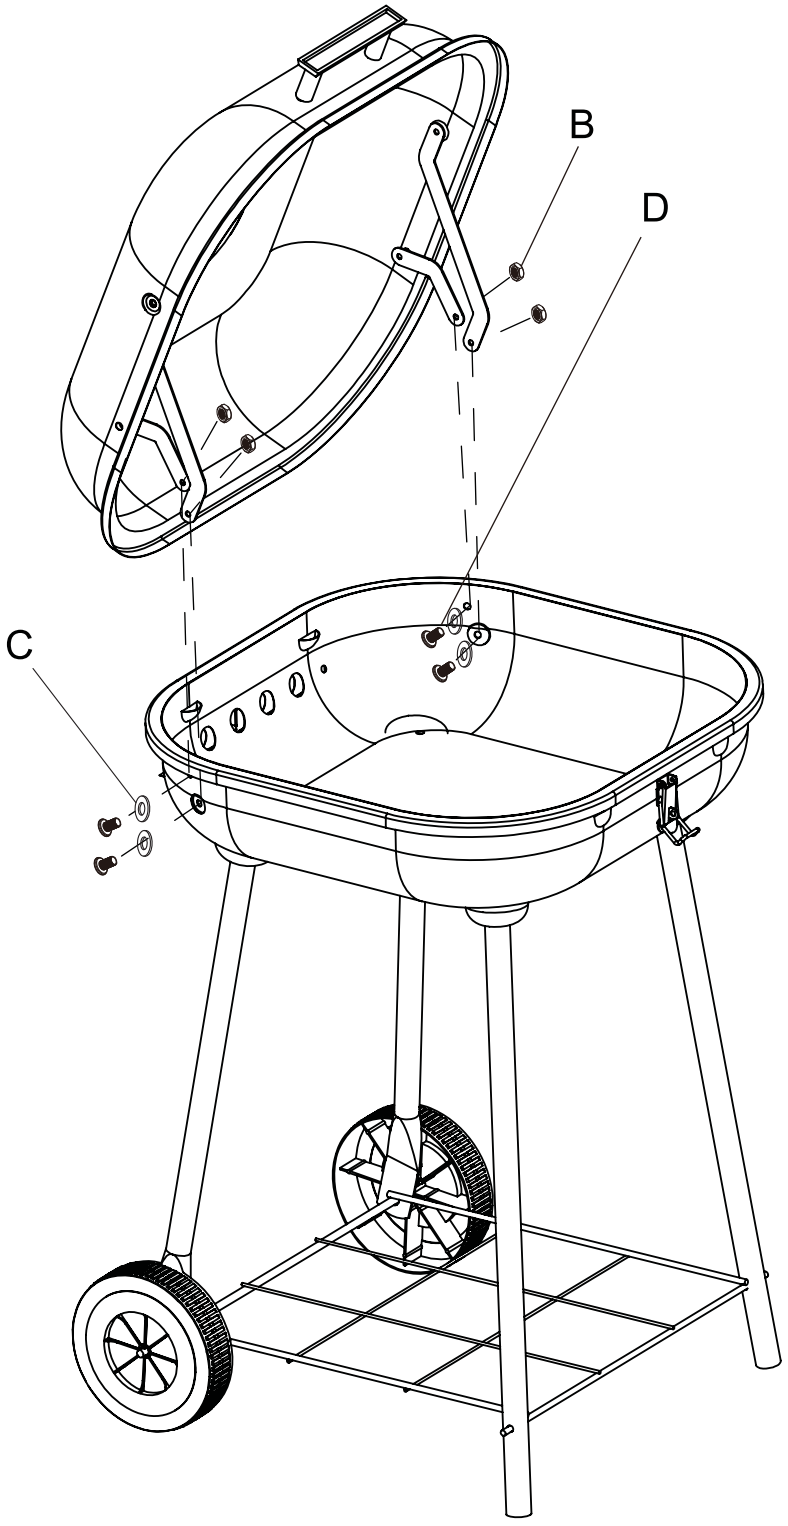

5.

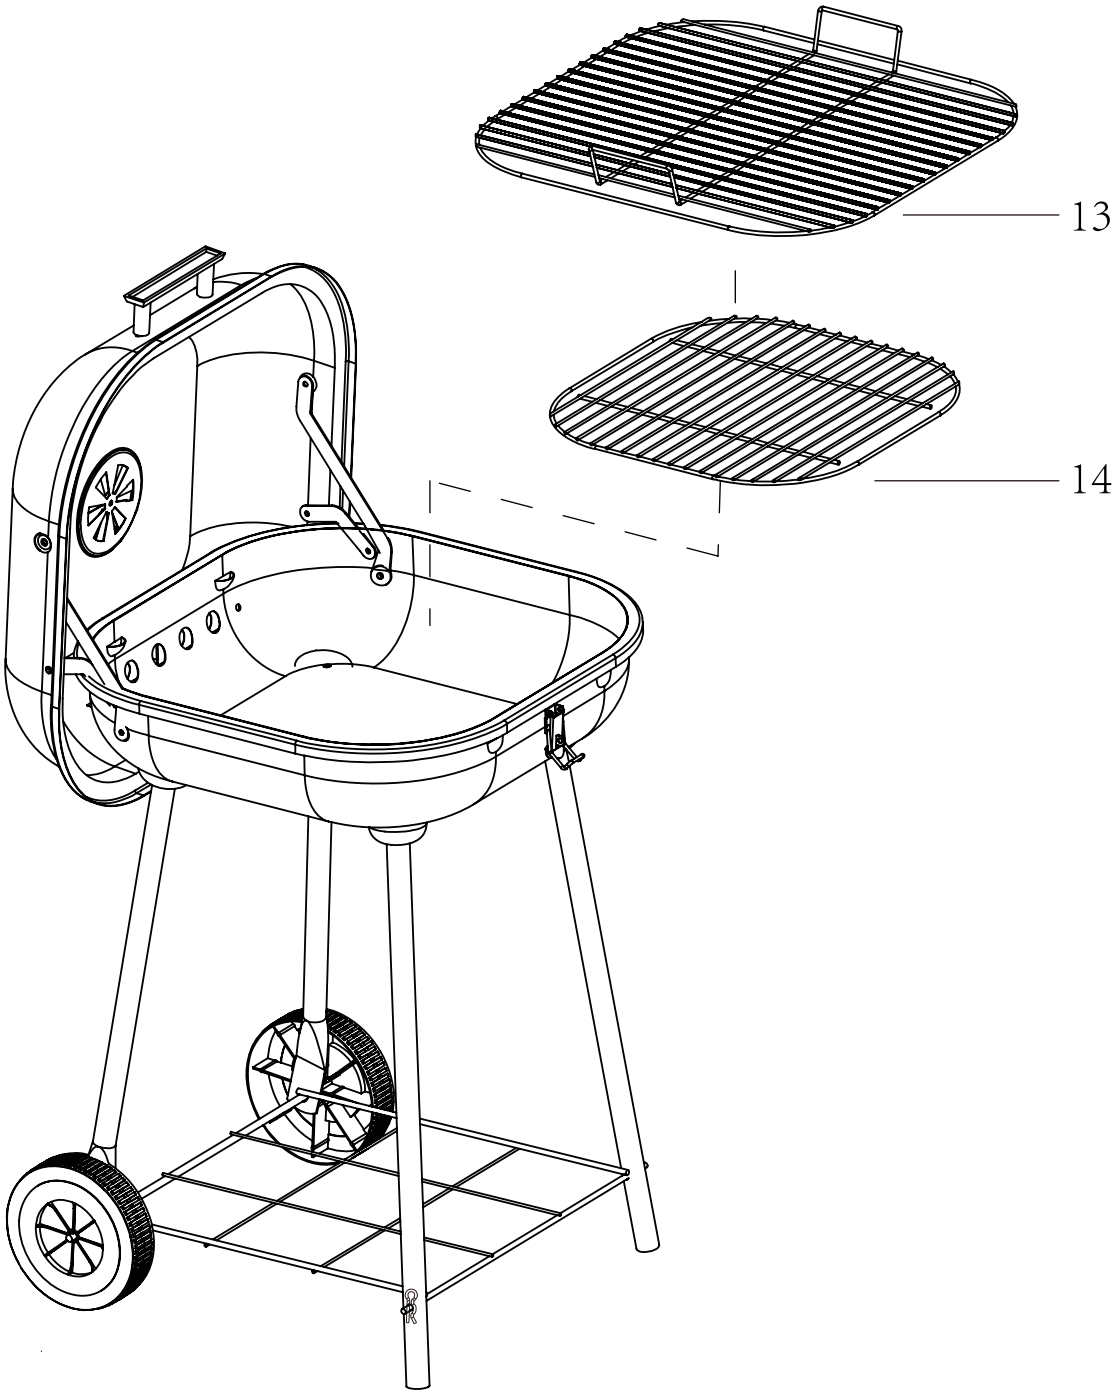

Charcoal BBQ

LIST OF SPARE PARTS

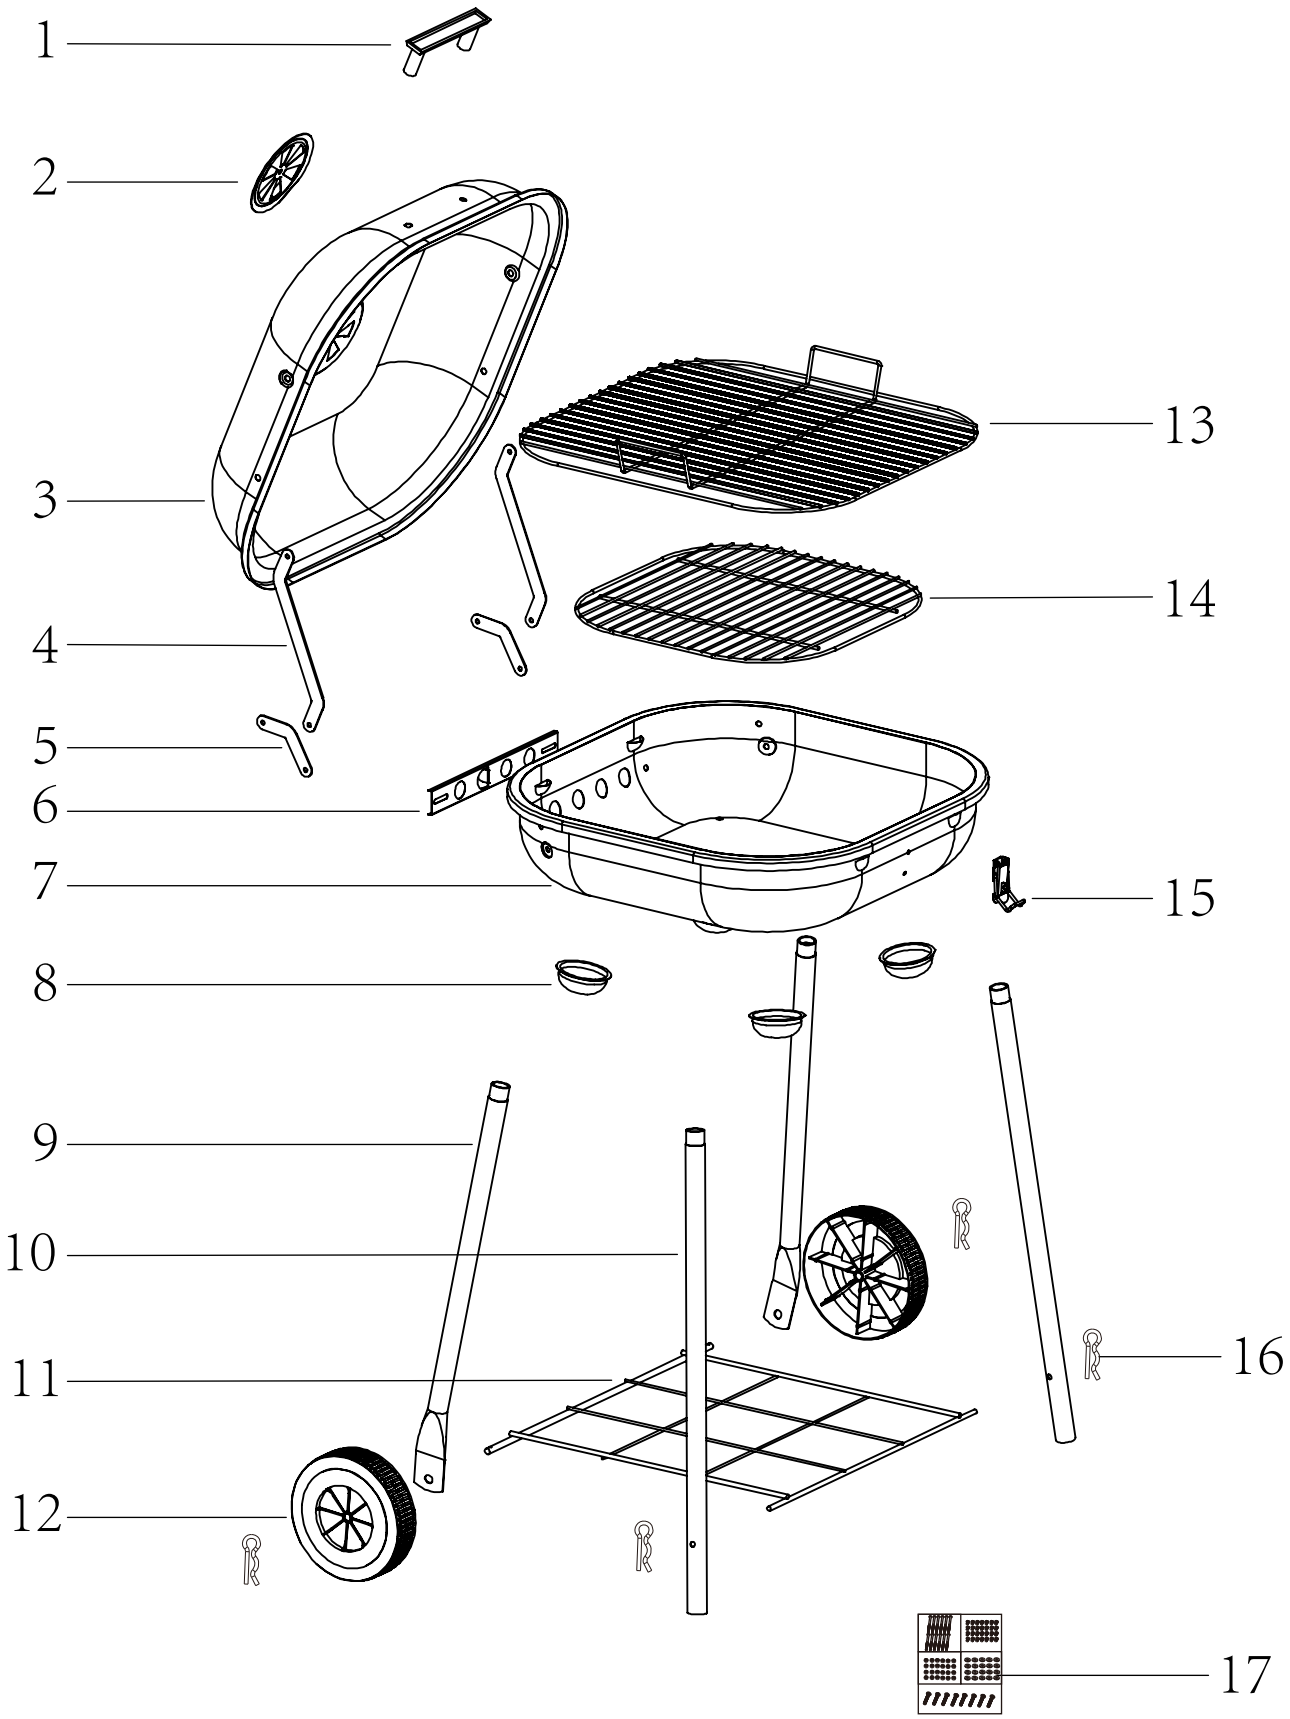

jumbuck

Charcoal BBQ

PART NUMBER	PART NAME	SUPPLIER CODE
1	Lid Handle	HAHA18-0101-14000-079
2	Lid ventilation plate	HAHA18-0201-10040-076
3	Lid	HAHA18-0301-04040-086
4	Long hinge	HAHA18-0401-04120-082
5	Short hinge	HAHA18-0501-04120-082
6	BBQ body ventilation plate	HAHA18-0601-10040-076
7	BBQ body	HAHA18-0701-04040-087
8	Leg cup	HAHA18-0801-04120-074
9	Short leg	HAHA18-0901-01000-088
10	Long leg	HAHA18-1001-01000-088
11	Wire base	HAHA18-1102-01000-088
12	Wheel	HAHA18-1201-13000-080
13	Grill	HAHA18-1301-01000-082
14	Charcoal tray	HAHA18-1401-01000-088
15	Lock	HAHA18-1501-00000-082
16	R pin	HAHA18-1601-00000-080
17	Bolt pack	BP-B333-1

WARRANTY

Thank you for purchasing one of our quality Jumbuck BBQs.

YOUR JUMBUCK BBQ IS COVERED AGAINST DEFECTS FOR A PERIOD OF 12 MONTHS FOR PARTS AND LABOUR, REPAIR OR REPLACEMENT.

THIS WARRANTY EXCLUDES SURFACE RUST AND DAMAGE CAUSED BY ABUSE OR NEGLECT.

CONDITIONS OF THE WARRANTY

- The appliance must be operated and maintained in accordance with the instructions supplied in the operating manual.
- Any repair does not extend the warranty period.
- Any parts other than original Jumbuck parts will void this warranty.

Installation Conditions

- All installations must conform to the applicable Gas, Electrical and Building standards as laid down by the local codes for state or region.
- If the appliance is changed to natural gas (if applicable), it must be converted and installed by a licensed gas fitter.

FOR WARRANTY CLAIMS

The warranty for Australia is given by
Garth Australia Pty Ltd.
134 Hall Street
Spotswood
Victoria 3015
AUSTRALIA

Garth Support website: **www.garthsupport.com**
or call: 1800 427 841
email: australia@garthsupport.com

The warranty for New Zealand is given by
Bunnings NZ Ltd
PO Box 14436,
Panmure, Auckland, 1741
NEW ZEALAND

Tel: 09 –9782200
Fax: 09-9782222
Email: marketing@bunnings.co.nz

Any claim under this warranty must be made within 12 months of the date of purchase of the product.
Proof of purchase must be presented.

For Australian Customers

To make a claim under the warranty please contact Garth support website: **www.garthsupport.com**
or return the product (with proof of purchase) to any Bunnings store. (see: www.bunnings.com.au for store locations)

Garth Australia bears reasonable, direct expenses of claiming under the warranty.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss ordamage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

For New Zealand Customers

To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.co.nz for store locations).

Bunnings NZ Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof to our store for consideration.

The warranty covers manufacturer defects in material, workmanship and finish under normal use.

The warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

WHAT IS NOT COVERED IN THE WARRANTY

- Removal or re-installation costs. This warranty does not cover costs for transit, nor in home service.
- Liability will only be accepted for loss or damage during transit if at the time the product was being transported by Bunnings or a Bunnings approved contractor.
- Lack of maintenance, abuse, neglect, misuse, accidental or improper installation of this appliance.
- Scratches, dents, corrosion or discoloration caused by heat, abrasive chemical cleaners or chipping of porcelain enamel parts.
- Corrosion or damage caused by exposure to the elements such as insects, weather, hail or grease and fat fires.
- Rusting of cast iron plates, grills and burners.
- Cleaning and wear and tear; service calls of this nature are chargeable.
- Commercial use of the product.
- Unauthorized repairs or modifications during the warranty period.
- Glass breakage due to misuse or overheating
- Consumable items, example - batteries.

RECORD THE FOLLOWING INFORMATION

Attach the copy of the purchase receipt here:

Date of Purchase.....
Purchased From.....
Location.....
Model Name and Number.....
Serial Number.....
Receipt Number.....

Note: The serial number is located either on the outside of the packing carton or outside or inside the appliance.

FOR TECHNICAL ASSISTANCE

For Australia customers if you experience any technical issues with your Jumbuck BBQ, in the first instance review the instruction manual or contact the warranty service agent below.

For New Zealand customers if you experience any technical issues with your Jumbuck BBQ, in the first instance review the instruction manual or contact your local Bunnings warehouse.

FOR SPARE PARTS

Call your local Bunnings warehouse and ask them to order a part for you. You should provide the following information.

Model of BBQ .....
Year of purchase .....
Name of warranty service company above .....
Part that requires replacement (refer to the list of spare parts in the instruction manual) .....